


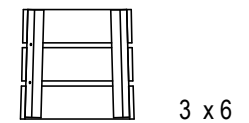
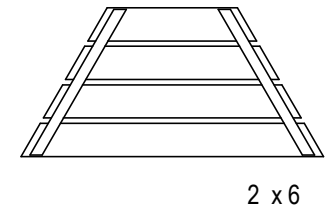


Montageanleitung 17303 LUTZ-Baumbank

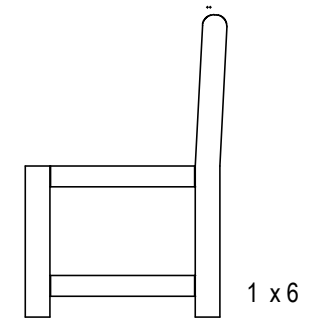




Recommended tools (not included)

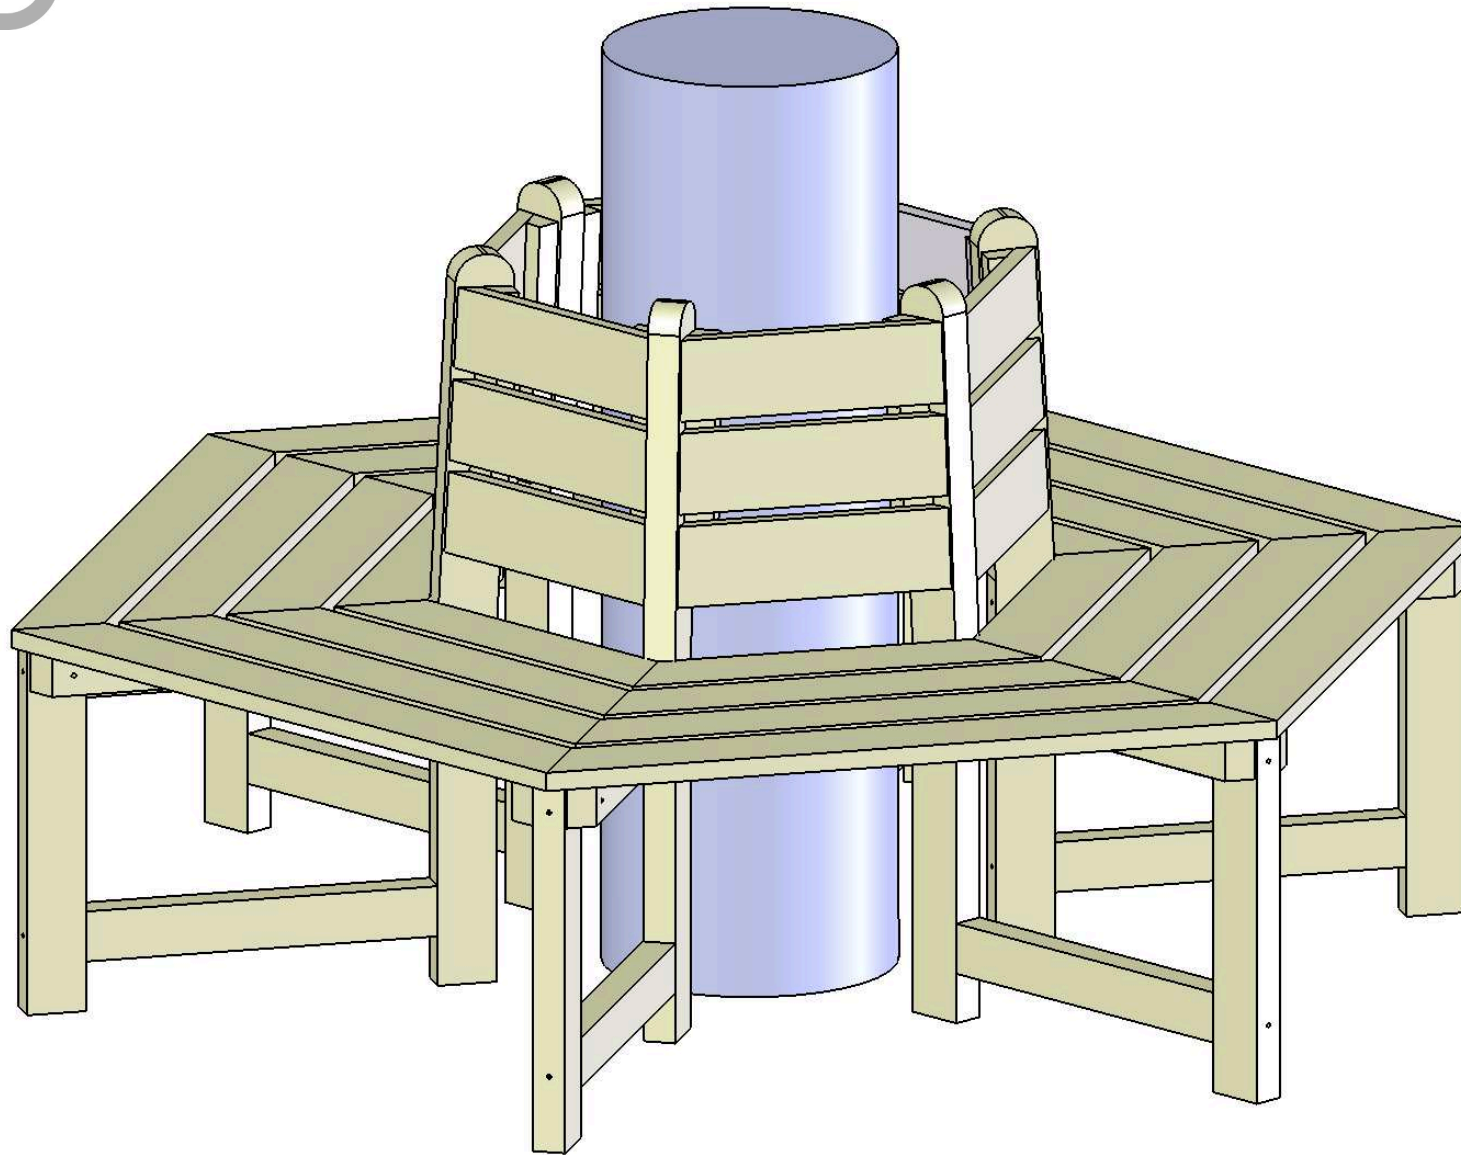

drill or screwdriver



1

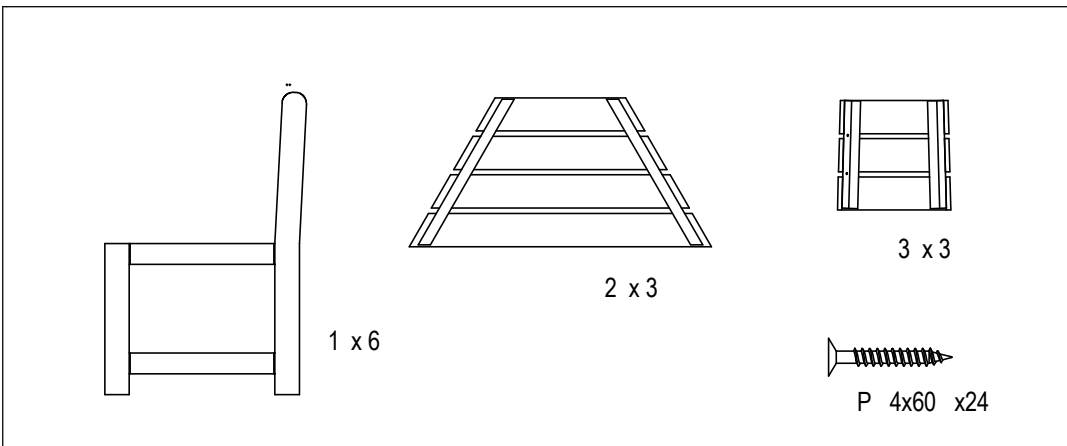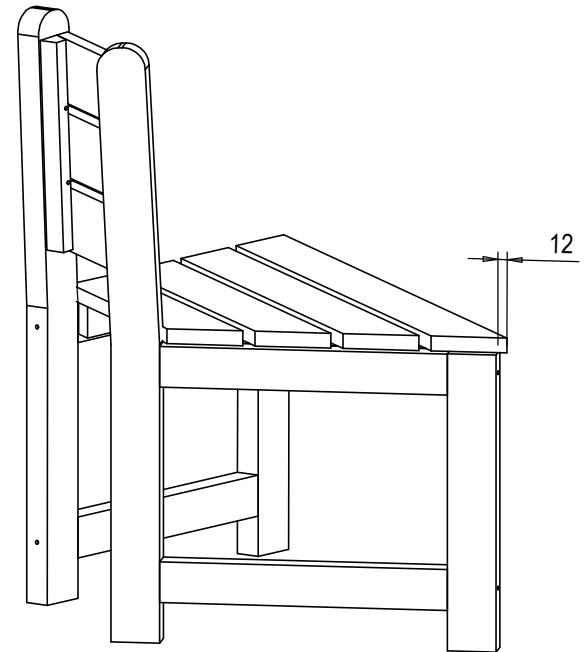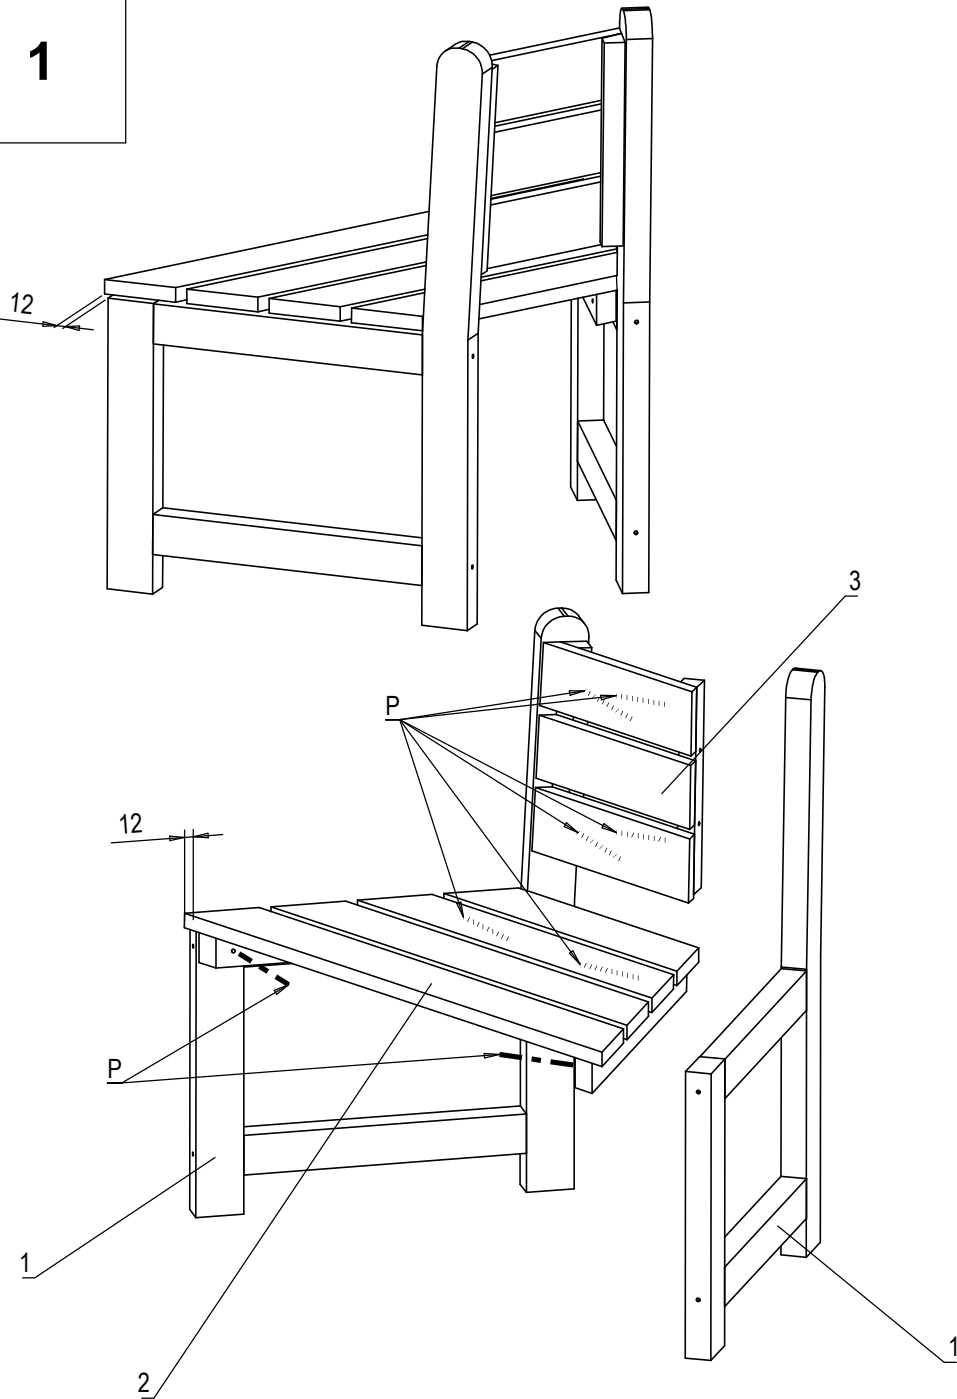

2

