


GARDENTOP

Trimax- und Gitterroststufen

Montageanleitung
Installation instruction

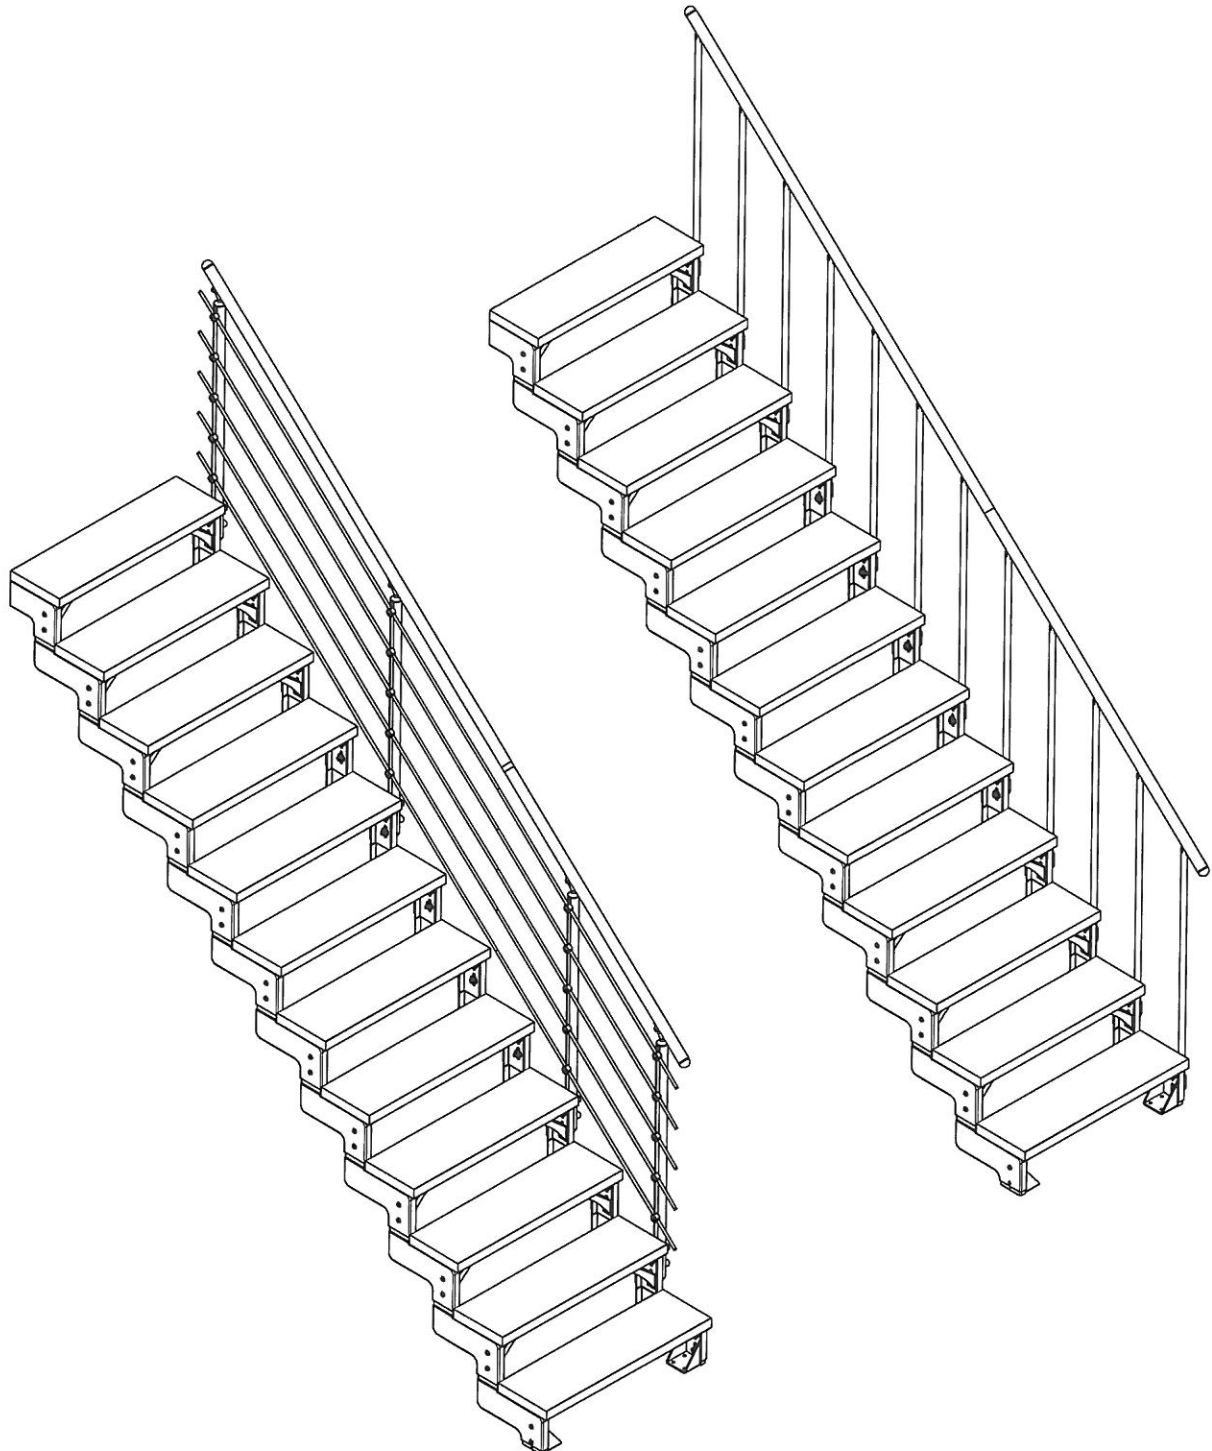


68010		Starter-Set Start kit			
<p>(1) (2)</p> <p>x 1 K2-41041 x 1 K2-41040</p>		<p>(5) (6)</p> <p>x 1 K1-41011 x 1 K1-41010</p>		<p>(7)</p> <p>x 2 K2-41000</p>	
<p>(40)</p> <p>x 8 K3-02045 M10x25</p>	<p>(41)</p> <p>x 8 K3-04110 Ø10</p>	<p>(42)</p> <p>x 8 K3-04099 Ø10</p>	<p>(43)</p> <p>x 8 K3-03051 M10</p>	<p>(44)</p> <p>x 16 K3-08001 Ø12x60mm</p>	<p>(45)</p> <p>x 16 K3-06070 Ø10x60mm</p>
<p>(55)</p> <p>x 8 K3-04016 Ø6</p>	<p>(56)</p> <p>x 8 K3-03046 M6</p>	<p>(58)</p> <p>x 8 K3-02220 M6x20</p>	<p>(59)</p> <p>x 12 K3-06269 Ø6x35</p>		

68011		Ergänzungs-Set 1 step kit			
<p>(3) (4)</p> <p>x 1 K1-41021 x 1 H1-41020</p>		<p>(40)</p> <p>x 4 K3-02045 M10x25</p>	<p>(41)</p> <p>x 4 K3-04110 Ø10</p>	<p>(42)</p> <p>x 4 K3-04099 Ø10</p>	
		<p>(43)</p> <p>x 4 K3-03051 M10</p>			
<p>(55)</p> <p>x 8 K3-04016 Ø6</p>	<p>(56)</p> <p>x 8 K3-03046 M6</p>	<p>(58)</p> <p>x 8 K3-02220 M6x20</p>	<p>(59)</p> <p>x 12 K3-06269 Ø6x35</p>		

68020

Stufen-Winkel
Step support 1 step

8 9

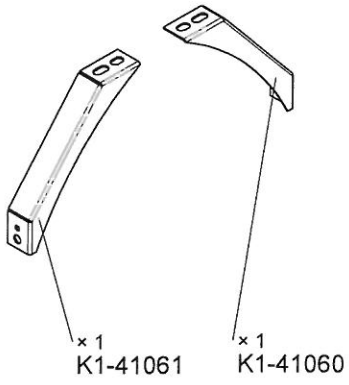

60




x 2
K3-06269
Ø6x35



Trimax-Stufe
Trimax step 80 cm / 100 cm

11

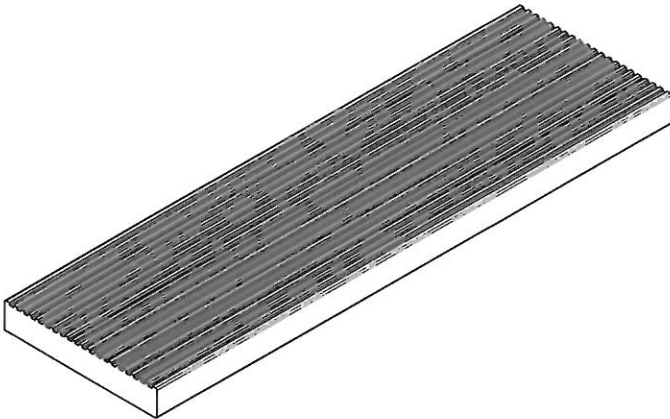
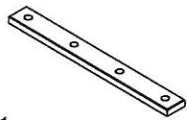











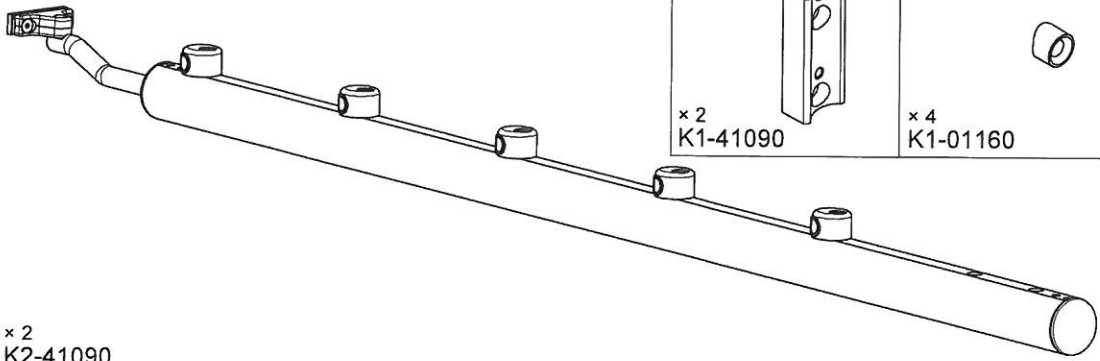









59



x 6
K3-06269
Ø6x35




68030		Steiggeländer für 6 Stufen Standard banister 6 steps											
14		15		16		17							
× 6 K2-41050		× 1 K1-01221		× 6 K1-02130		× 2 K2-04040							
18								$\varnothing 22\text{mm}$					
								1010mm					
× 6 K1-41055													
19								$\varnothing 40\text{mm}$					
								2000mm					
× 1 K1-01100													
46		47		48		49		50		53			
× 6 K3-01004 M4×25		× 6 K3-03004 M4		× 12 K3-05006 M6×8		× 2 K3-06004 ST 4,8×20		× 16 K3-01005 M5×12		× 4 K3-05050 M5×12			
68040		Steiggeländer PROVA Starter-Set PROVA banister start											
17		20								21		22	
													
× 2 K2-04040		× 2 K2-41090								× 2 K1-41090		× 4 K1-01160	
26												$\varnothing 40\text{mm}$	
												1240mm	
× 1 K1-01107													
27												$\varnothing 10\text{mm}$	
												1240mm	
× 5 K1-18060													
28		49		51									
													
× 10 K1-01010		× 2 K3-06004 ST 4,8×30		× 4 K3-02010 M10×70									

68041

Steiggeländer PROVA Ergänzungs-Set
PROVA banister extension

15

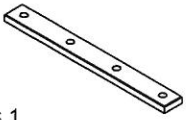

x 1
K1-01221

20



x 1
K2-41090

21




x 1
K1-41090


22



x 2
K1-01160

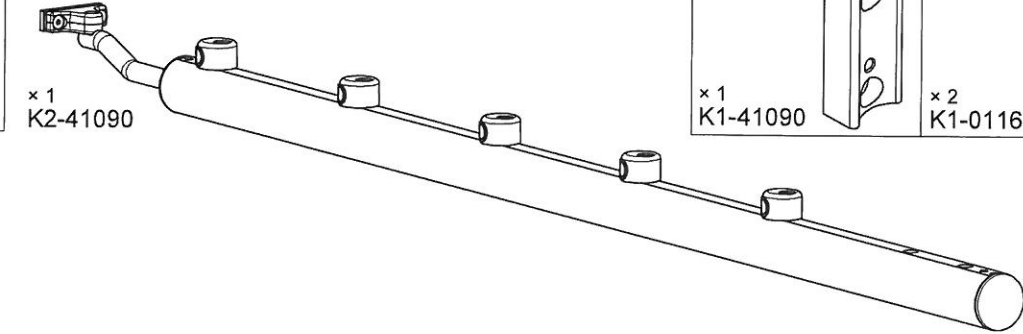


26



Ø 40mm

1240mm

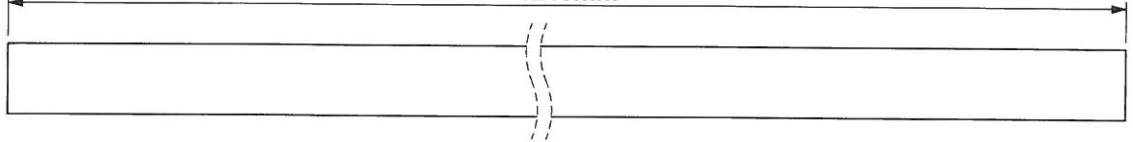


x 1
K1-01107

27



Ø 10mm

1240mm



x 5
K1-18060

53



x 5
K3-05050
M5x12



54



x 5
K3-08023
Ø8



55




x 2
K3-02010
M10x70




1

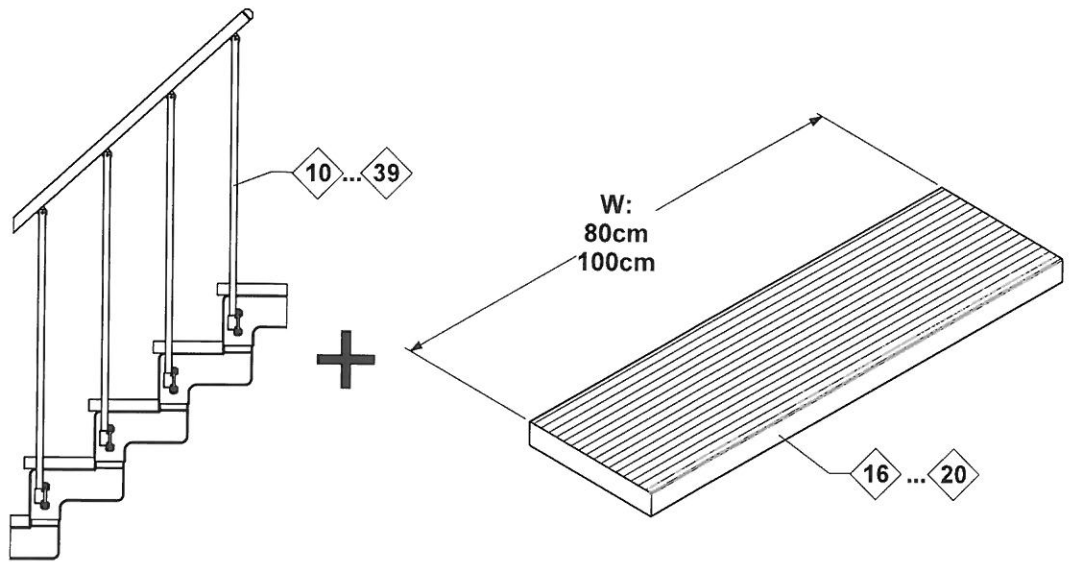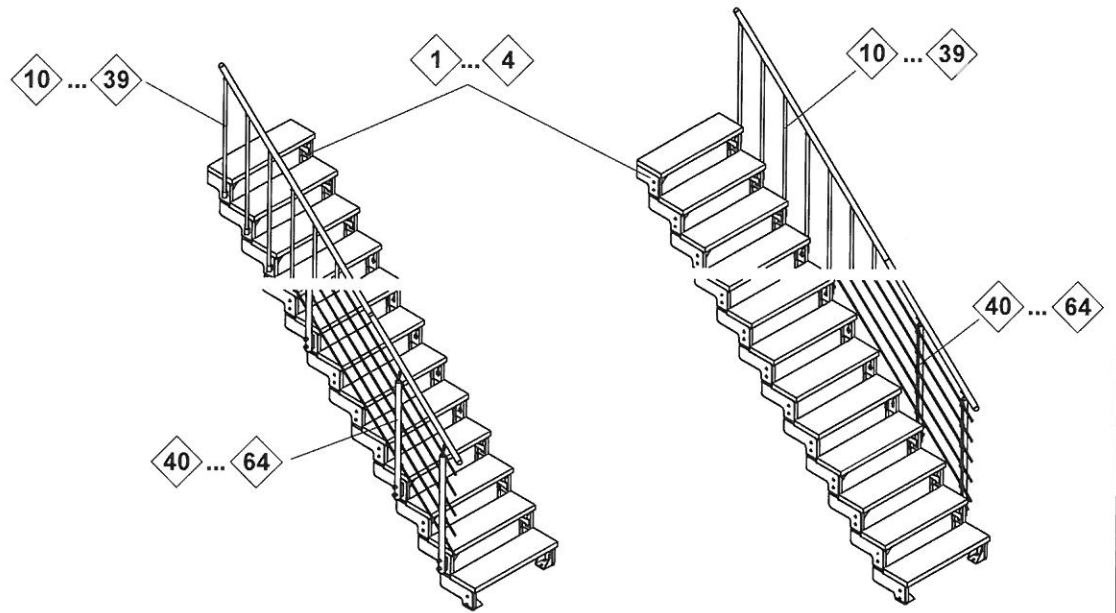


2

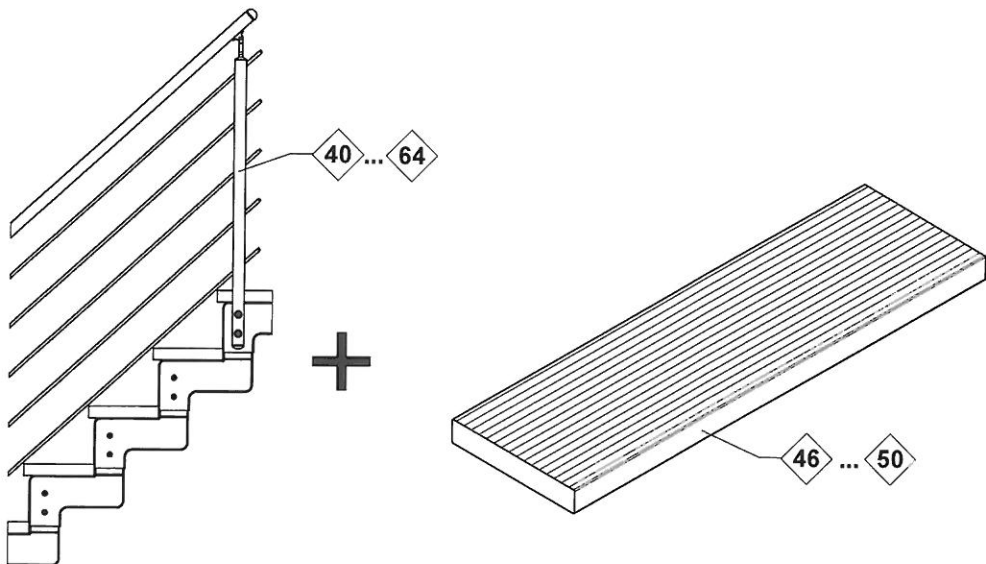


1

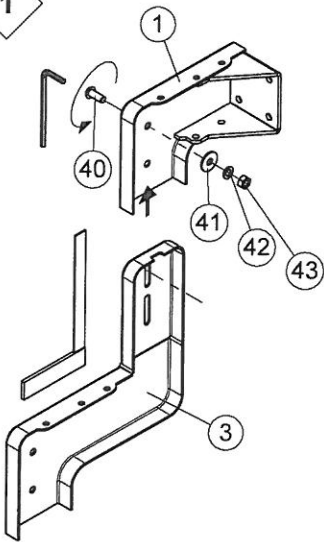


min. 180mm
max 220mm

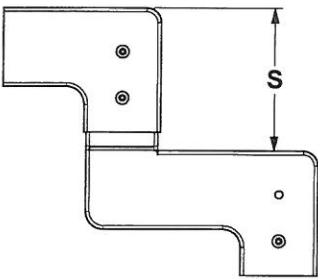


2

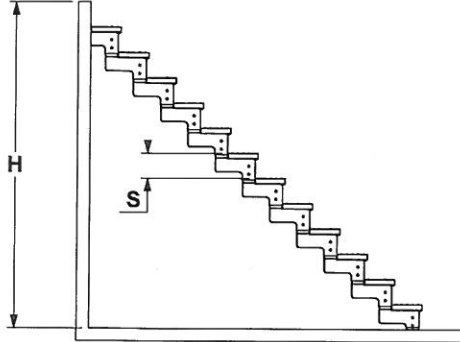


H	S				
	180	190	200	210	220
	mm	mm	mm	mm	mm
2	540	570	600	630	660
3	720	760	800	840	880
4	900	950	1000	1050	1100
5	1080	1140	1200	1260	1320
6	1260	1330	1400	1470	1540
7	1440	1520	1600	1680	1760
8	1620	1710	1800	1890	1980
9	1800	1900	2000	2100	2200
10	1980	2090	2200	2310	2420
11	2160	2280	2400	2520	2640
12	2340	2470	2600	2730	2860

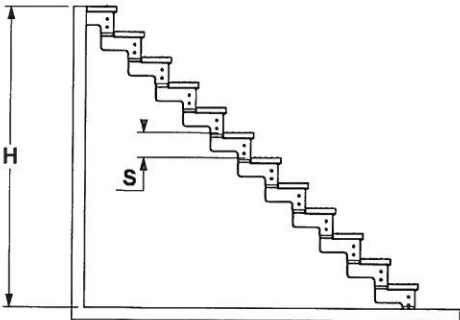

H	S				
	180	190	200	210	220
	mm	mm	mm	mm	mm
2	360	380	400	420	440
3	540	570	600	630	660
4	720	760	800	840	880
5	900	950	1000	1050	1100
6	1080	1140	1200	1260	1320
7	1260	1330	1400	1470	1540
8	1440	1520	1600	1680	1760
9	1620	1710	1800	1890	1980
10	1800	1900	2000	2100	2200
11	1980	2090	2200	2310	2420
12	2160	2280	2400	2520	2640

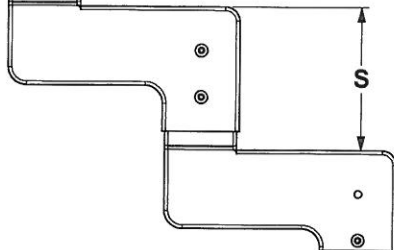


3


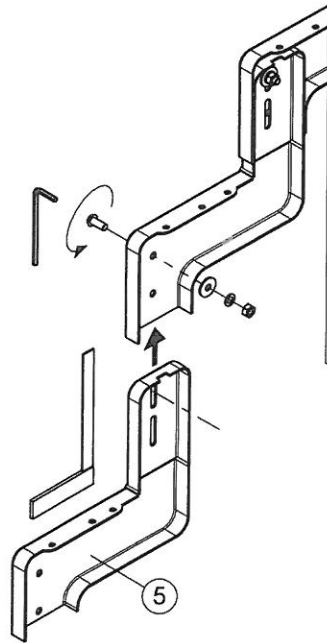


min. 180mm
max 220mm





4






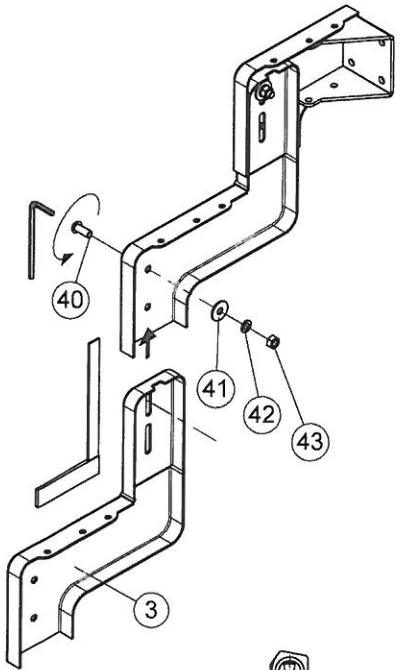



min. 180mm
max 220mm

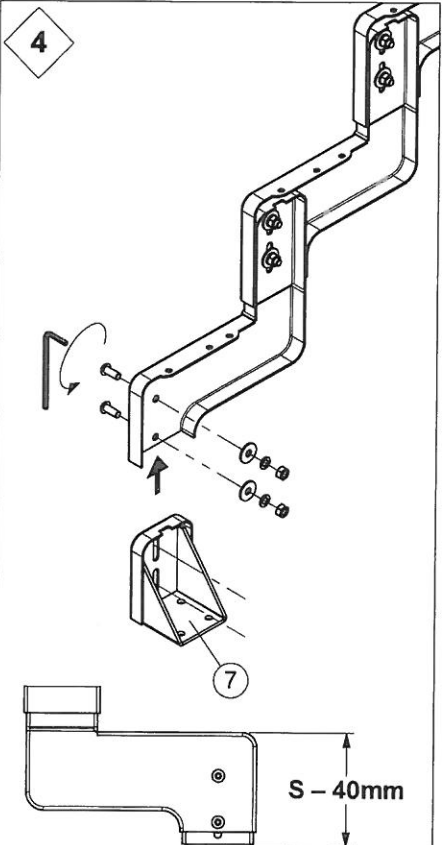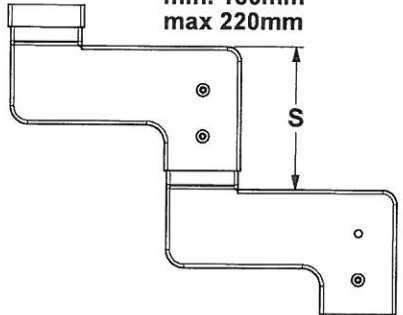

S - 40mm

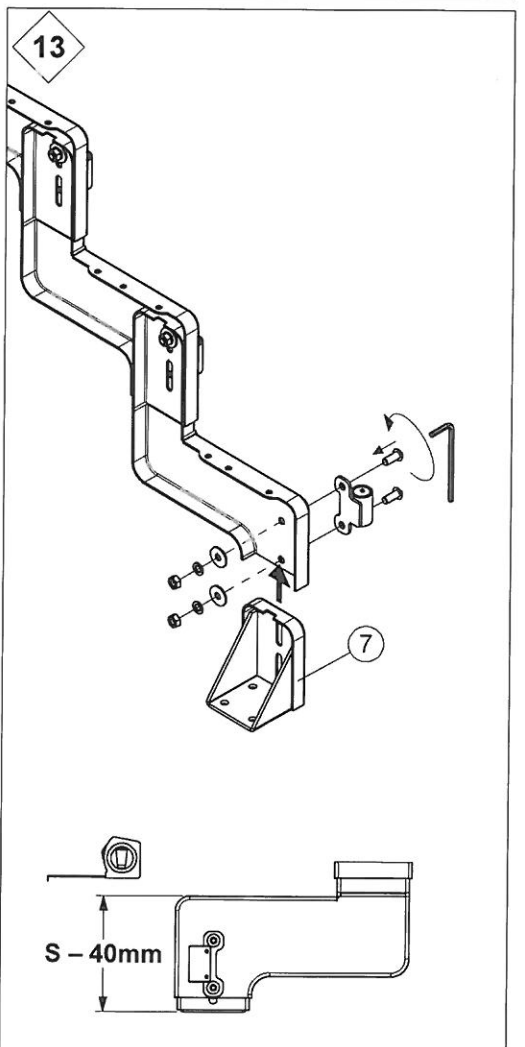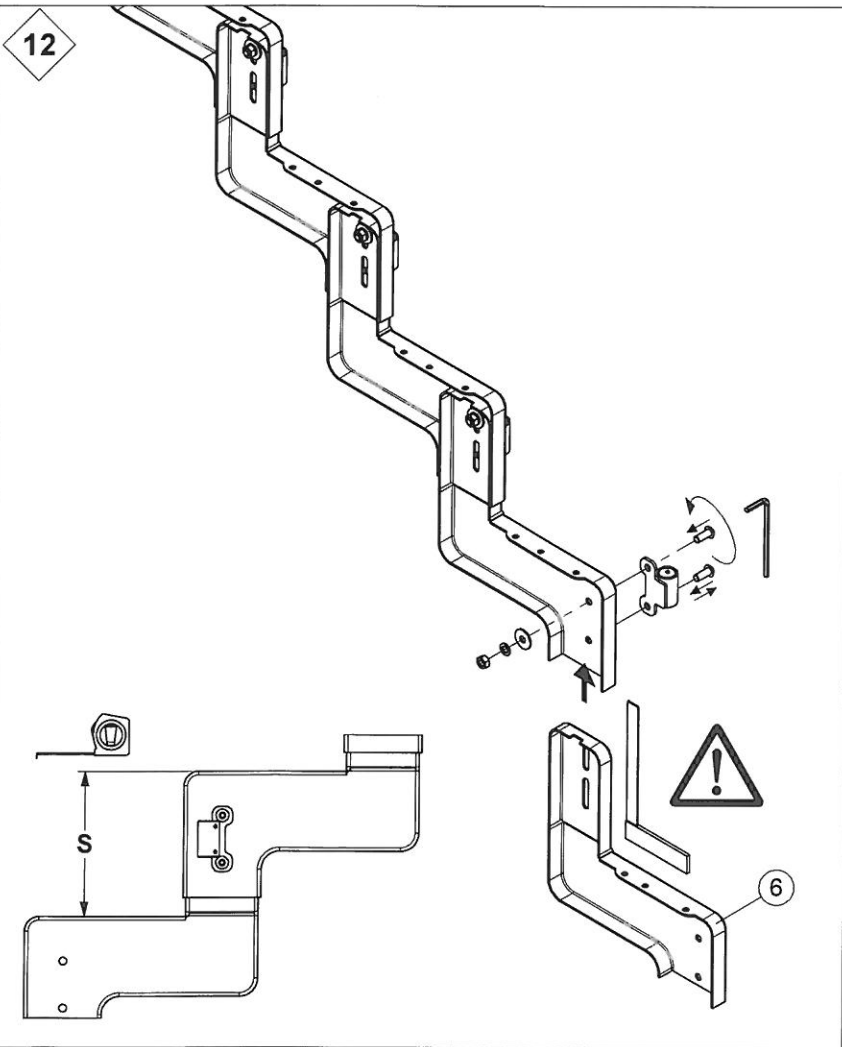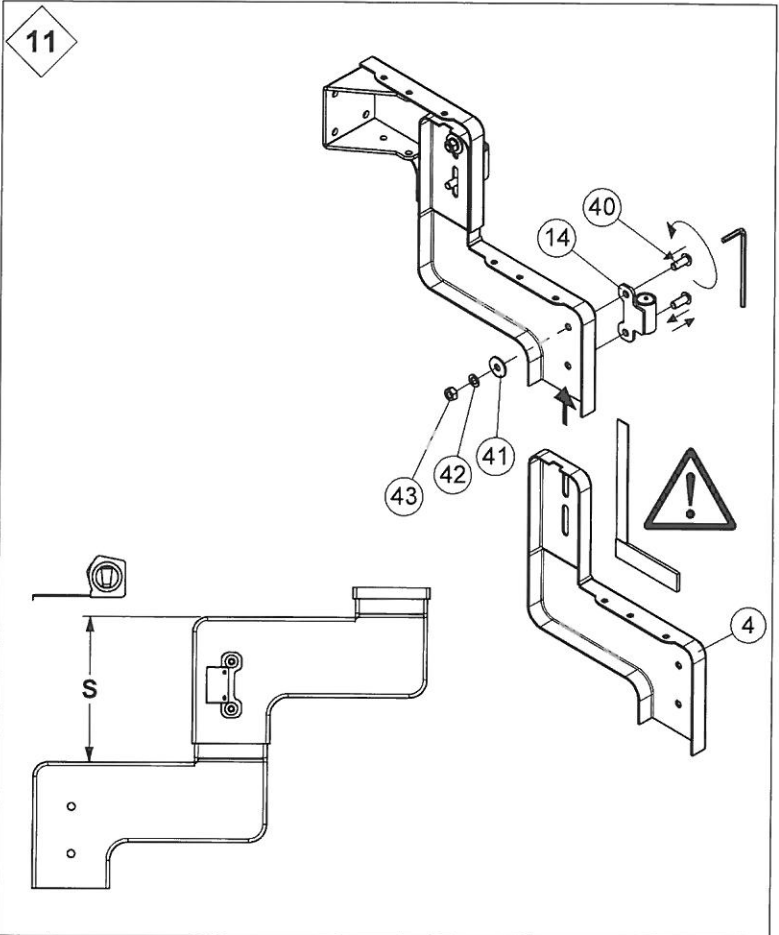
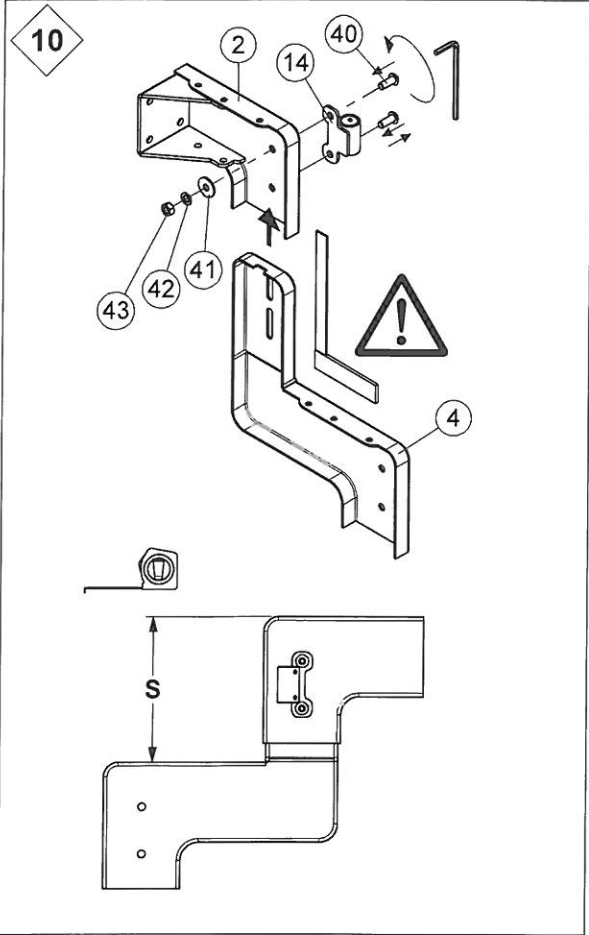


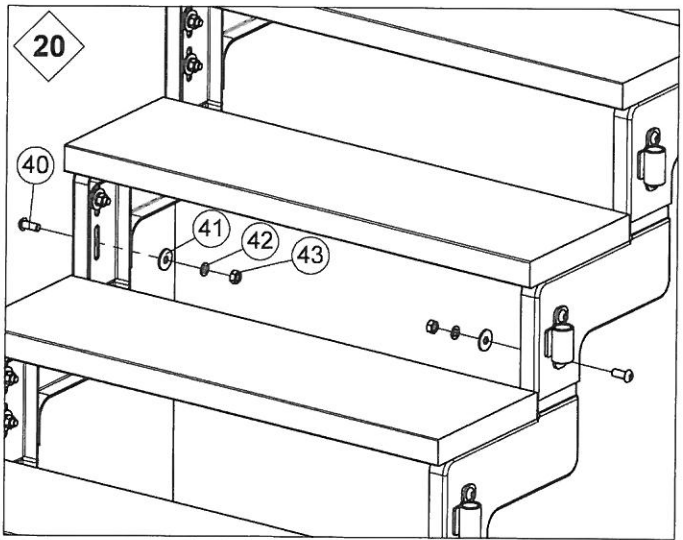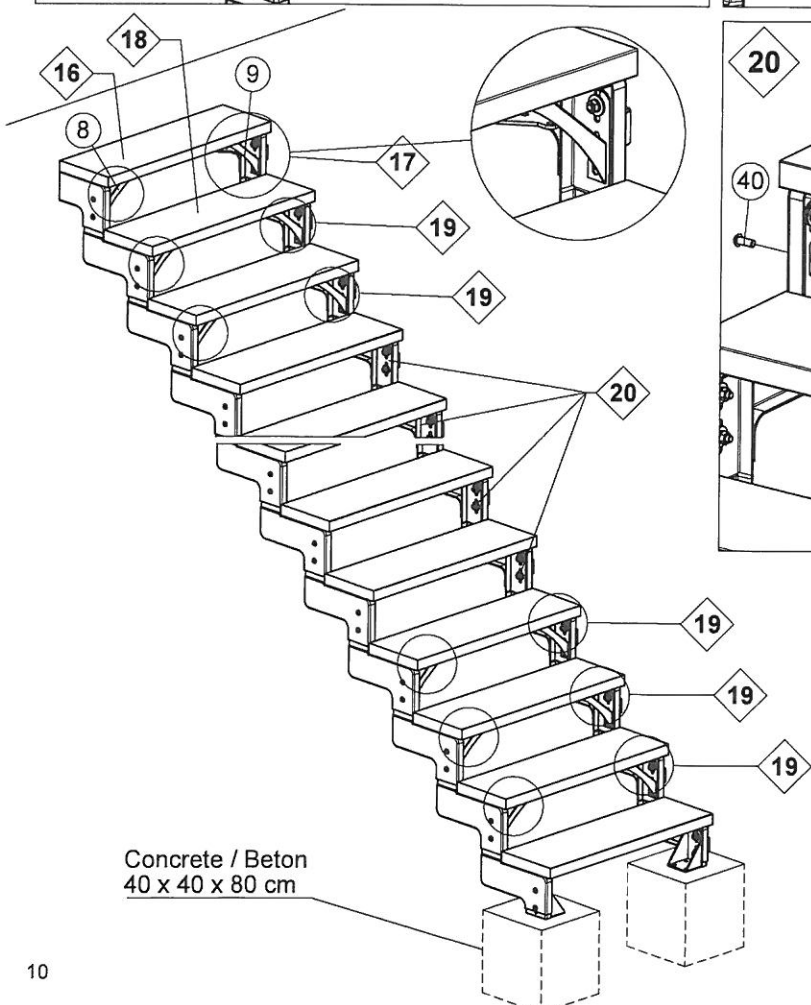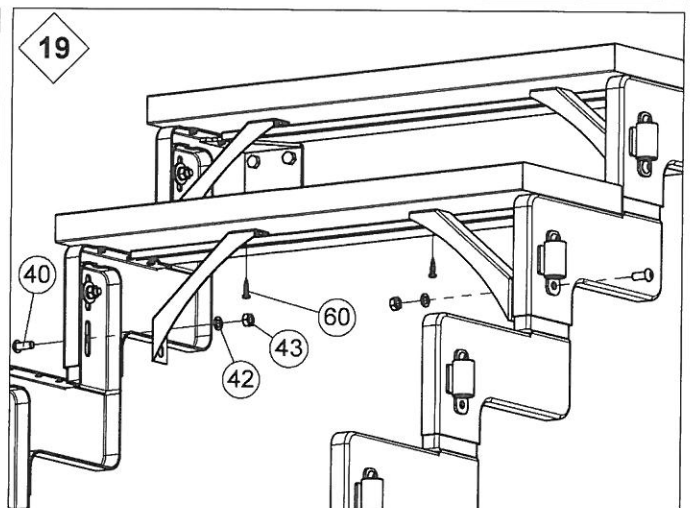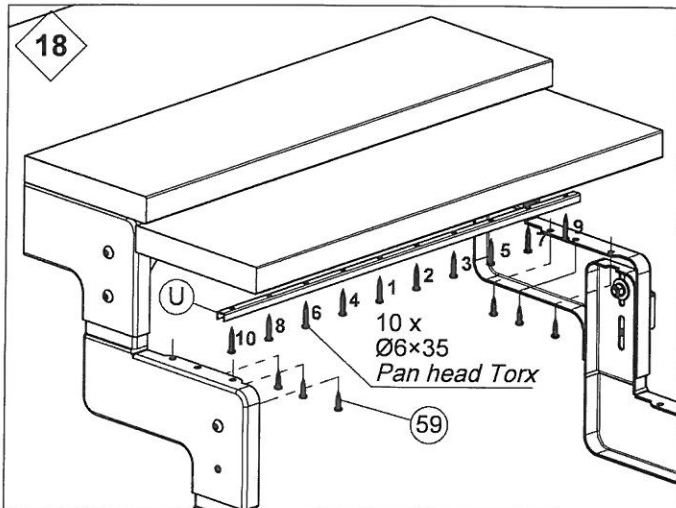
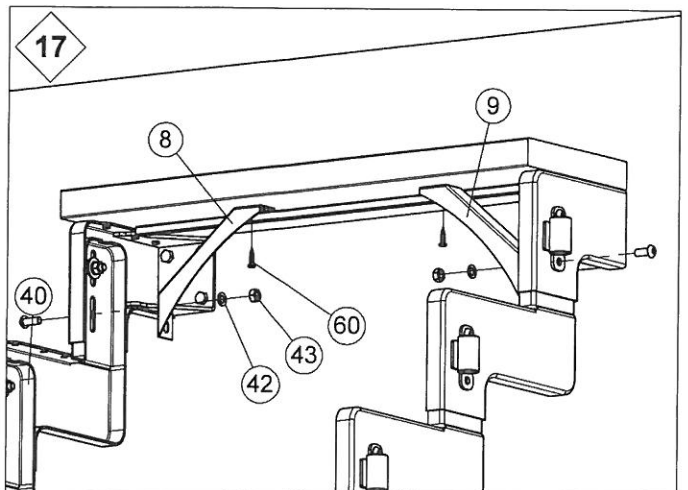
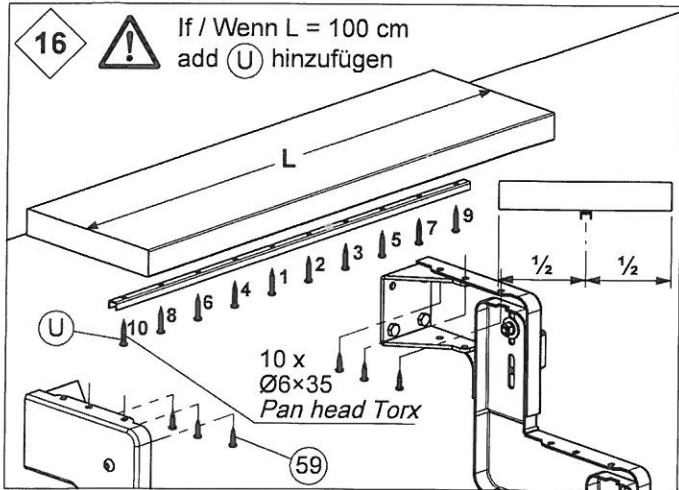














If more than 6 steps:
Add
(8) + (9)






Wenn mehr als 6 Stufen:
hinzufügen
(8) + (9)

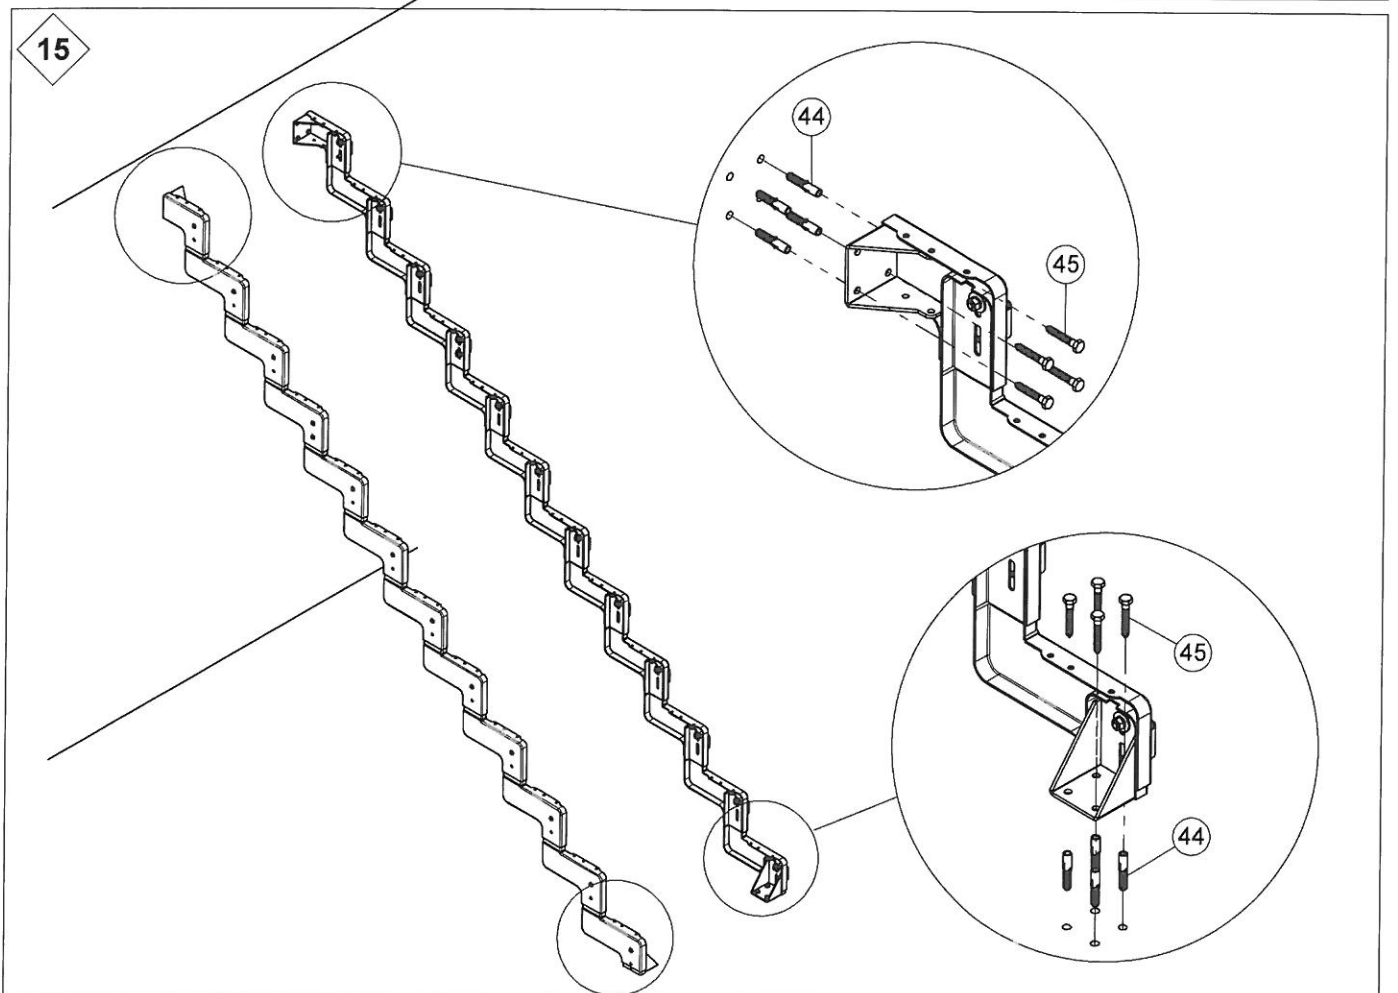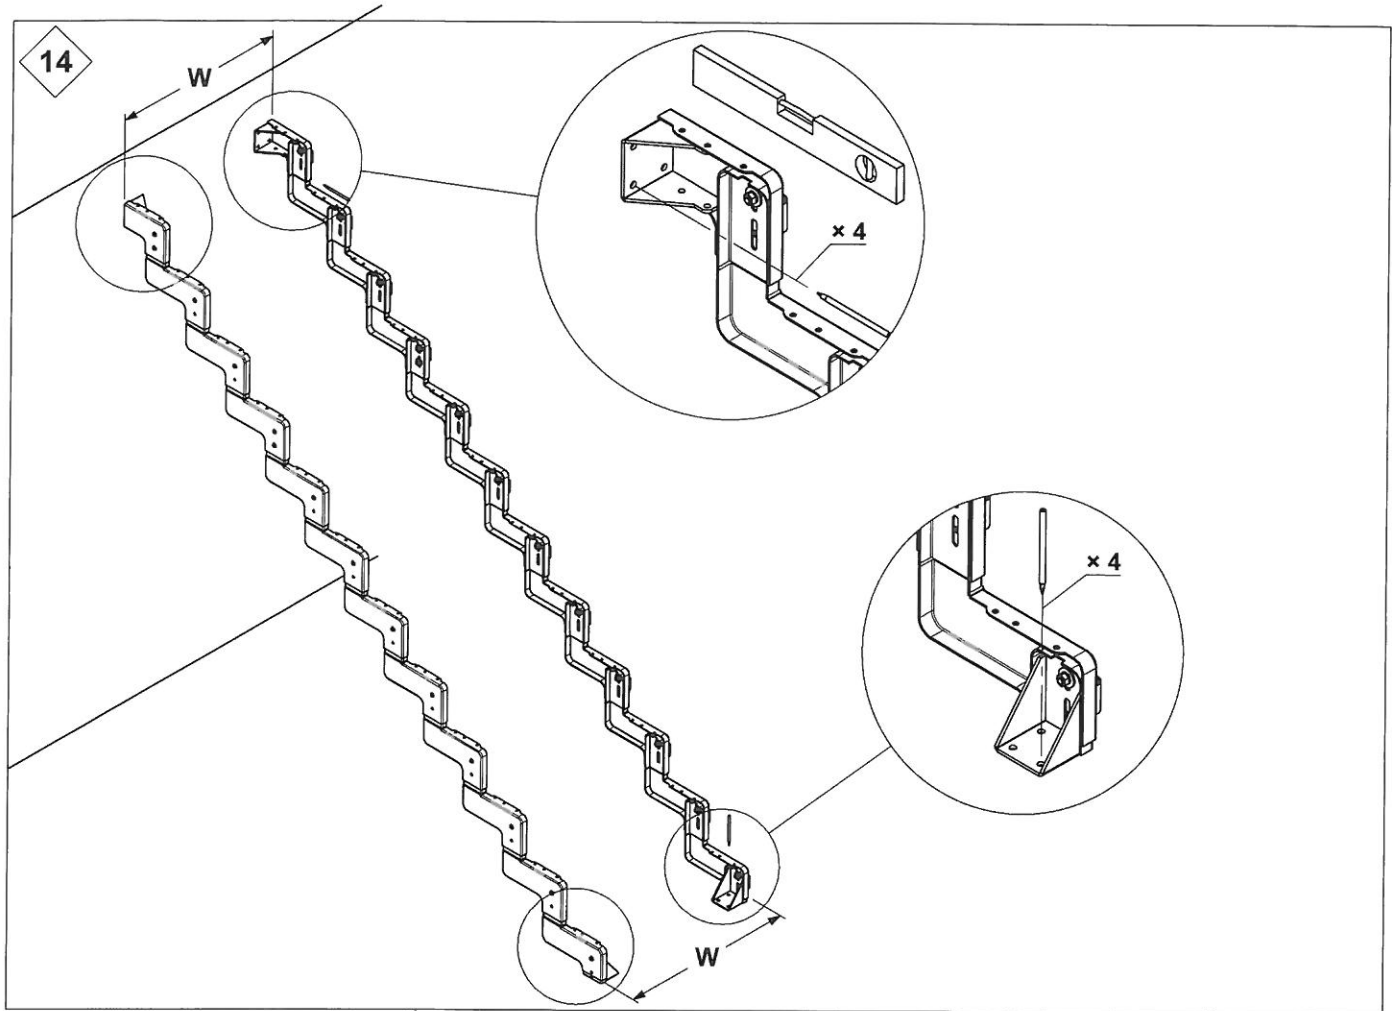

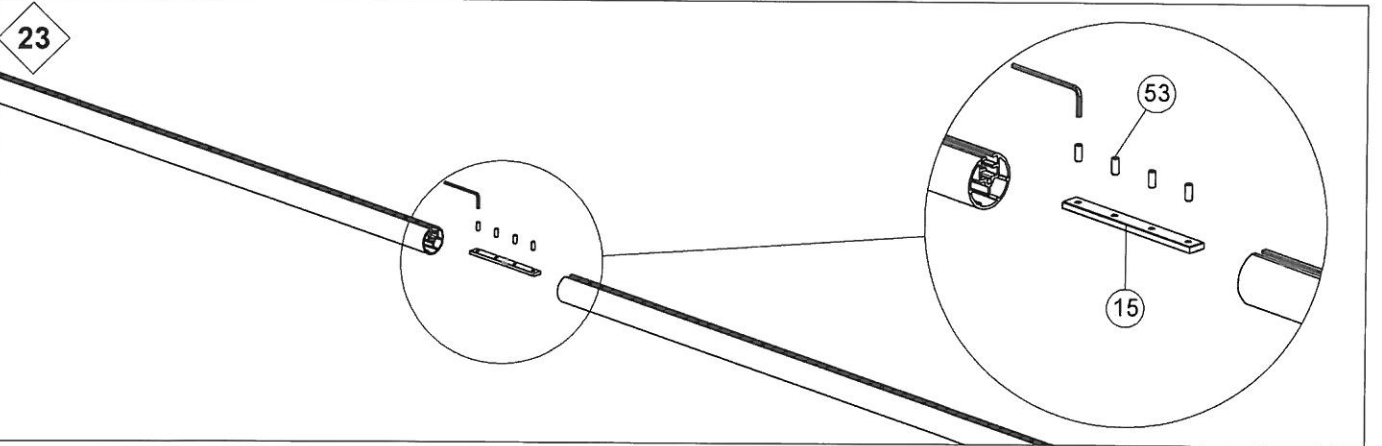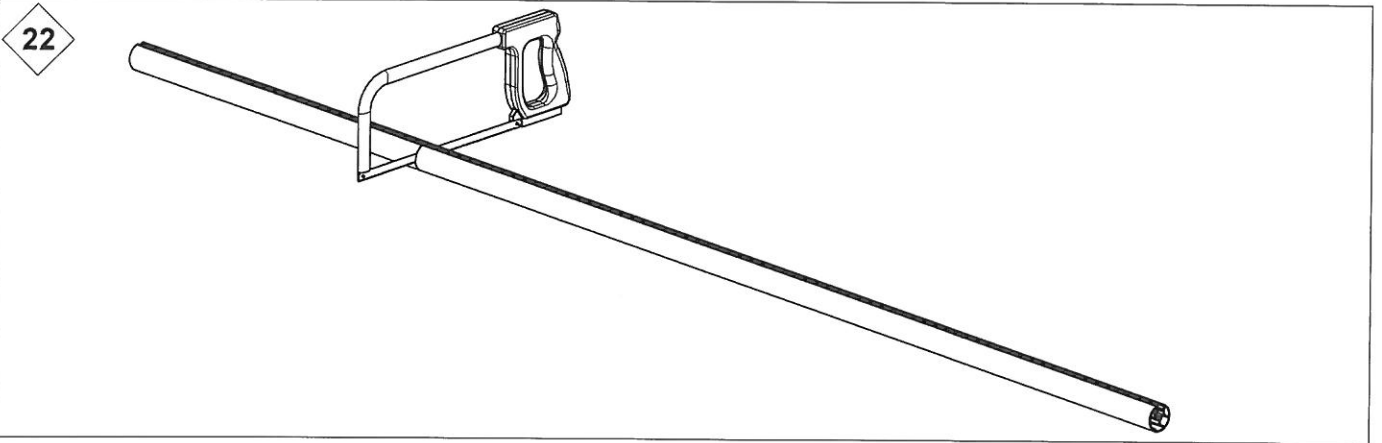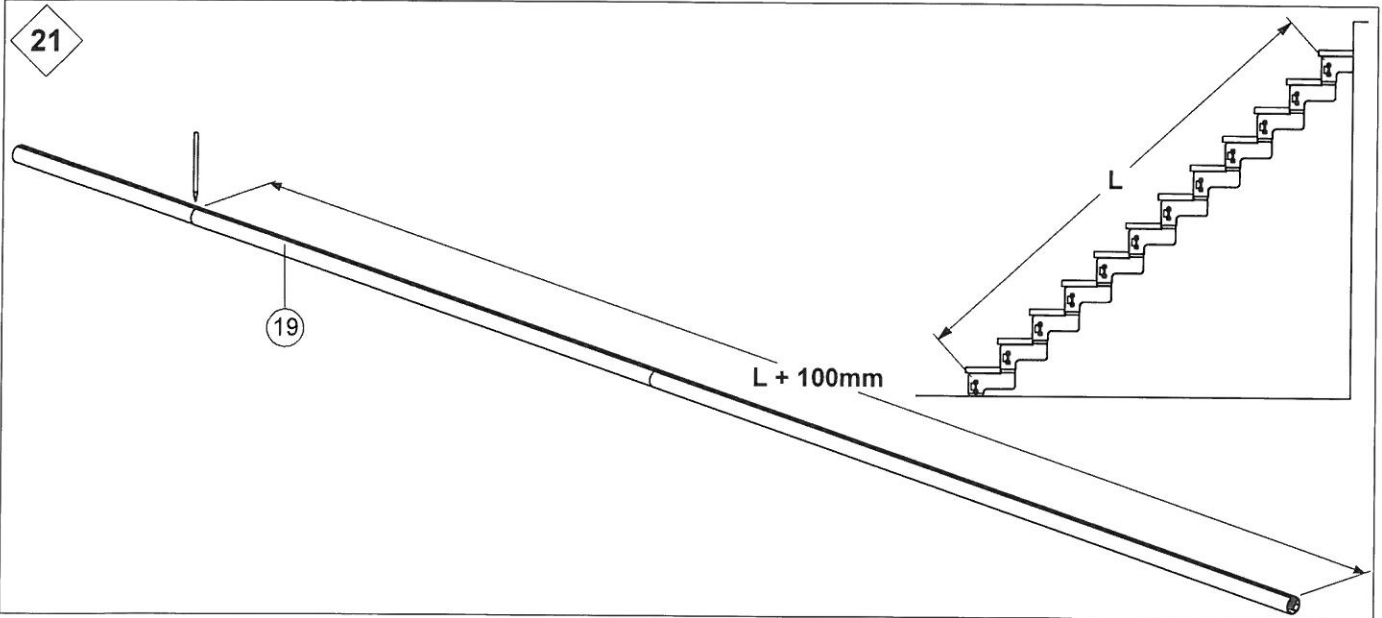

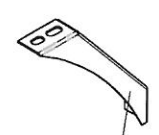


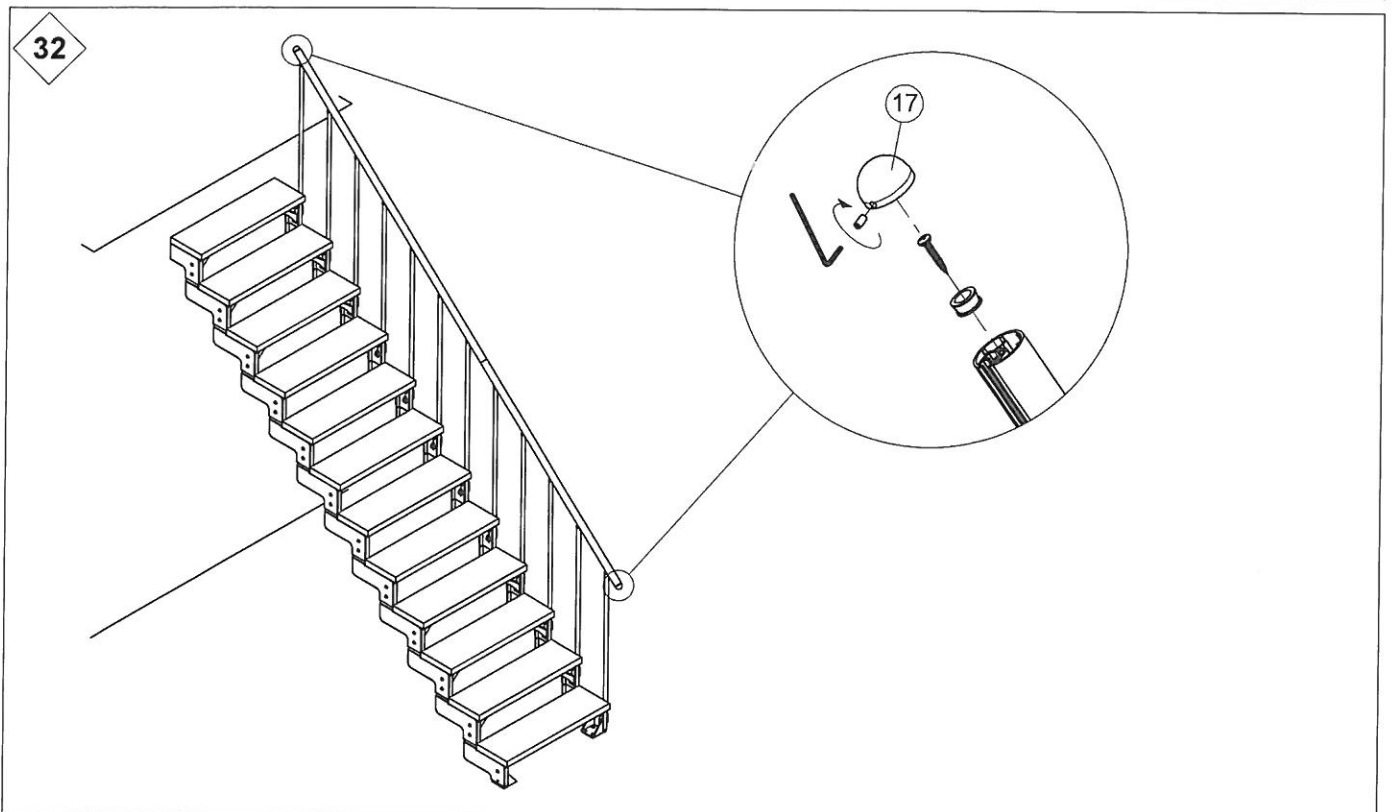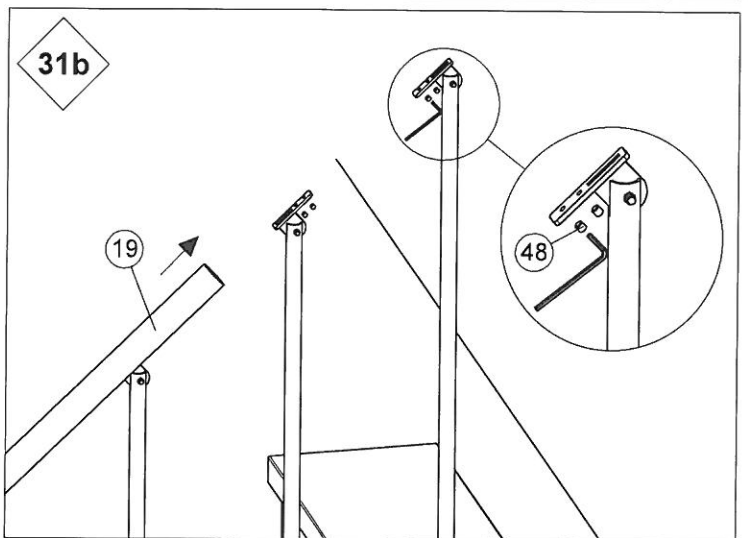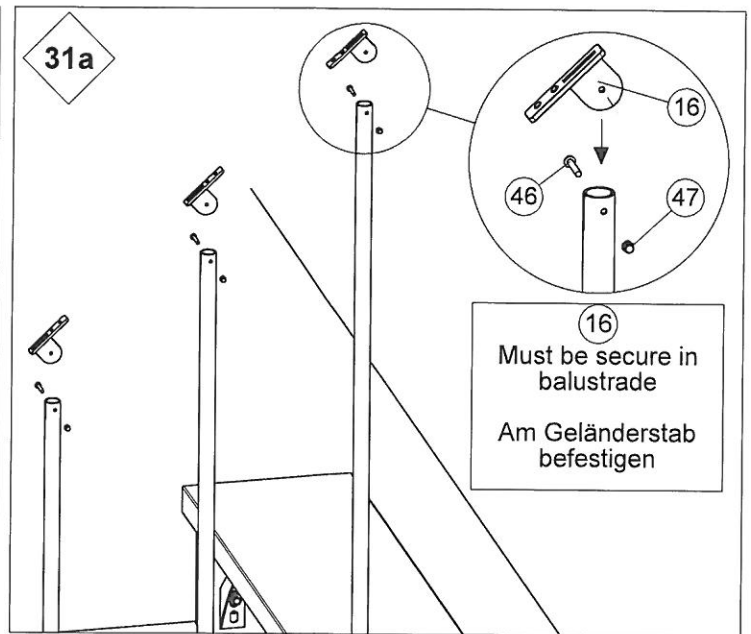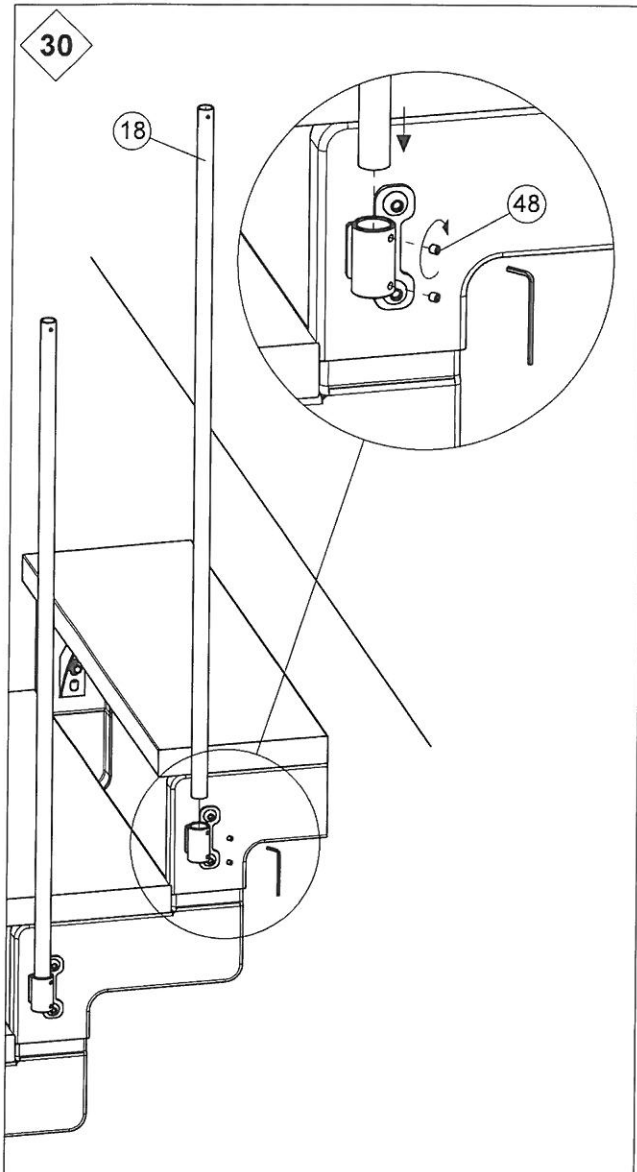

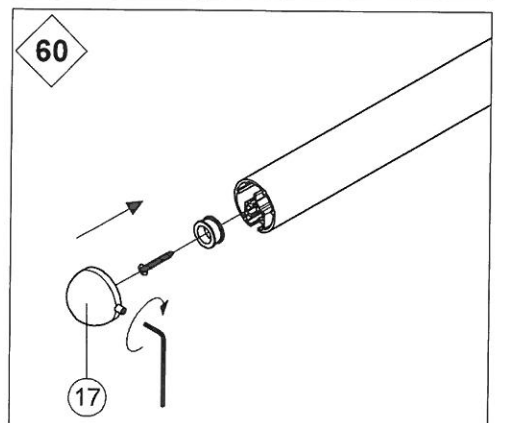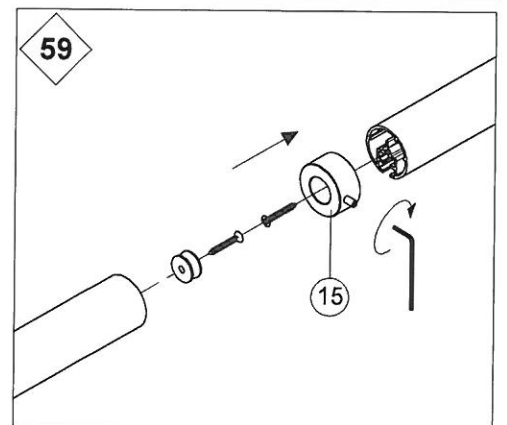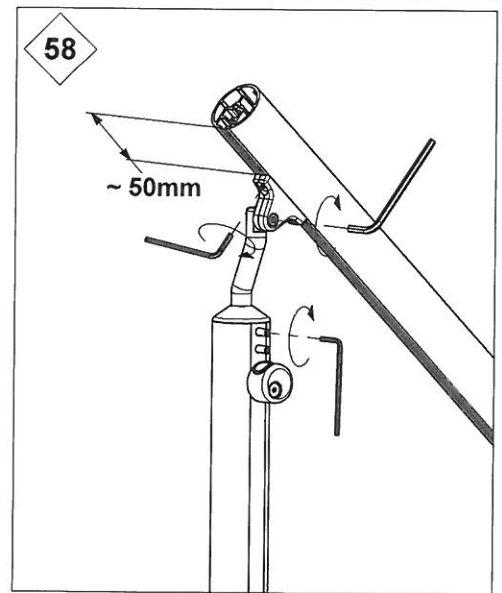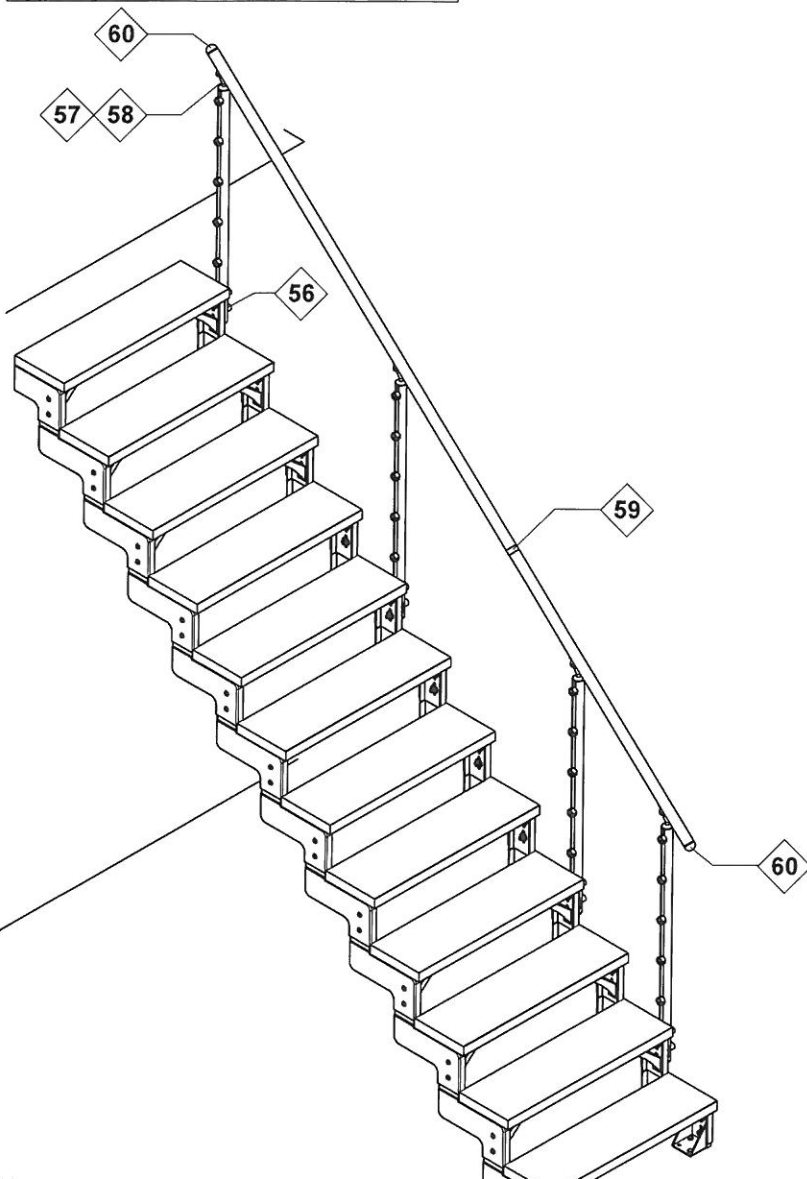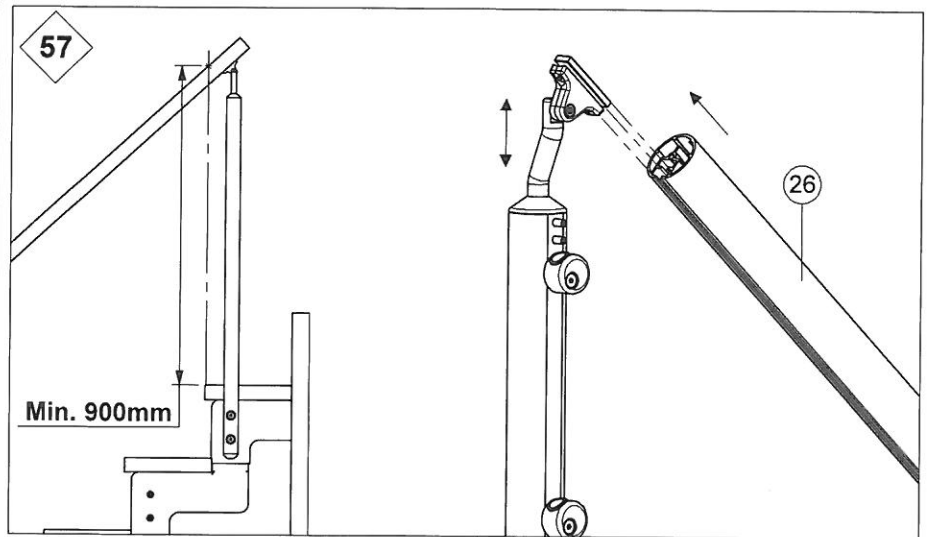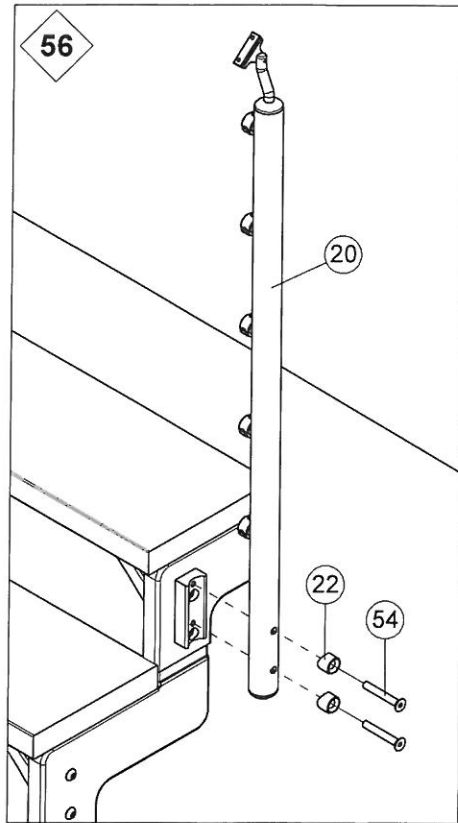
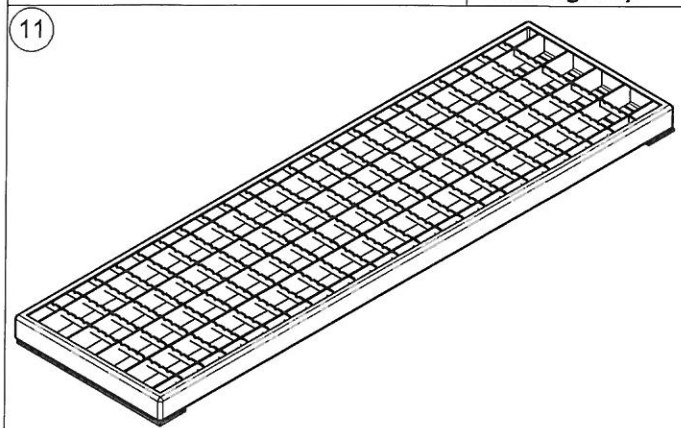


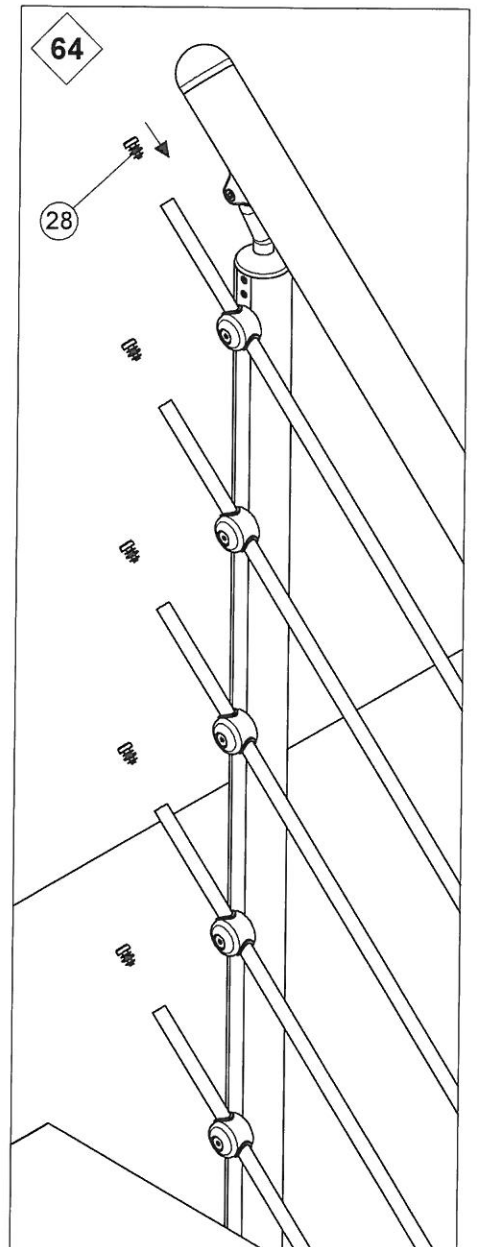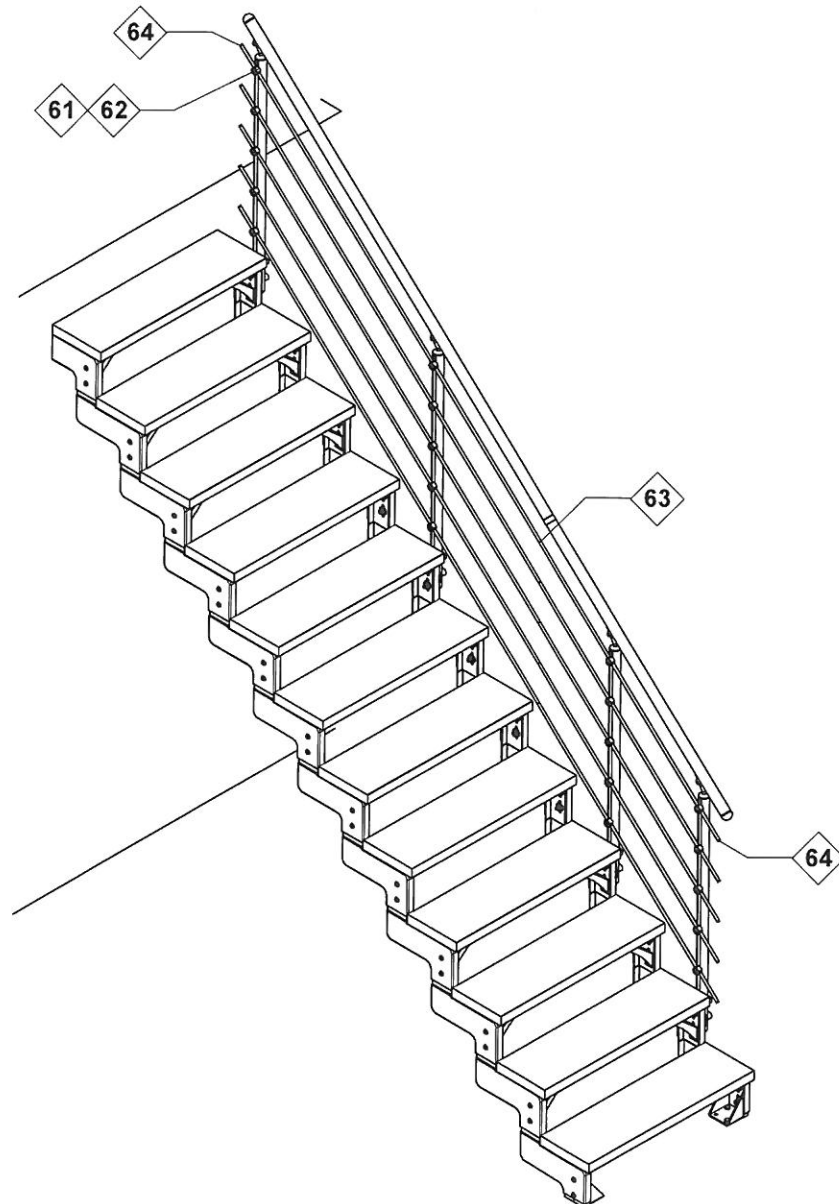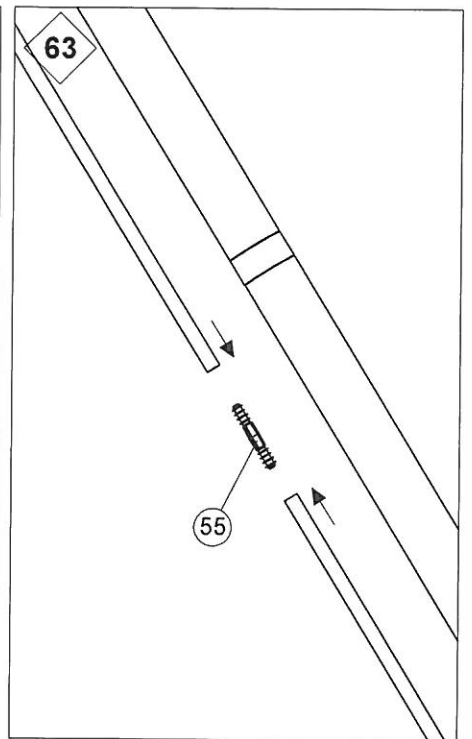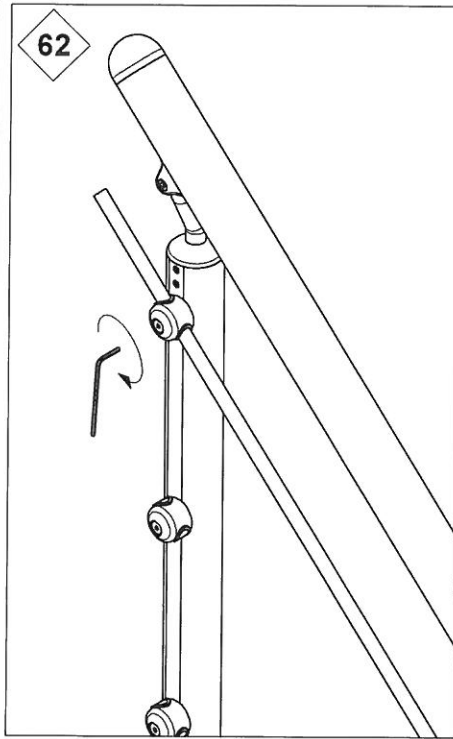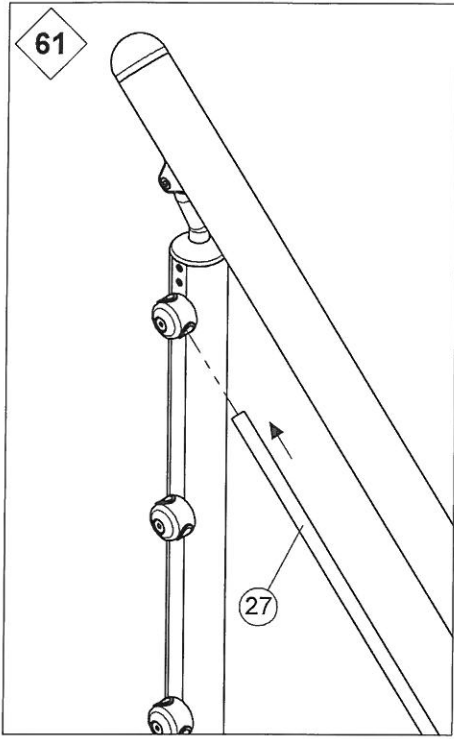



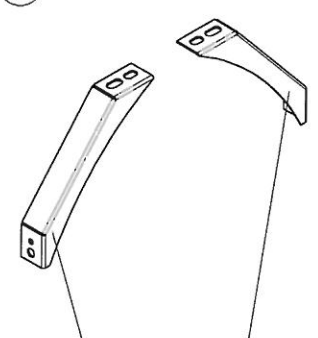



















68020	Stufen-Winkel <i>Step support 1 step</i>
--------------	--

<div style="display: flex; justify-content: space-around;"> 8 9 </div>	 <div style="display: flex; justify-content: space-around; margin-top: 10px;"> <div style="text-align: center;">  x 1 K1-41061 </div> <div style="text-align: center;">  x 1 K1-41060 </div> </div>		<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;"> 57  x 2 K3-02386 <i>M8x40</i> </div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;"> 60  x 2 K3-06269 <i>Ø6x35</i> </div> <div style="border: 1px solid black; padding: 5px;"> 61  x 2 K3-03047 <i>M8</i> </div>	
--	--	--	---	--


	Gitterrost-Stufe <i>Grating step</i>	80 cm / 100 cm		
<div style="border: 1px solid black; border-radius: 50%; padding: 2px; width: 30px; height: 30px; margin: 0 auto;">11</div>			<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;"> 23  x 2 K3-04016 <i>Ø6</i> </div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;"> 55  x 4 K3-04016 <i>Ø6</i> </div> <div style="border: 1px solid black; padding: 5px;"> 56  x 4 K3-03046 <i>M6</i> </div>	
	<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;"> 57  x 2 K3-02386 <i>M8x40</i> </div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;"> 58  x 4 K3-02065 <i>M6x20</i> </div> <div style="border: 1px solid black; padding: 5px;"> 61  x 2 K3-03047 <i>M8</i> </div>			

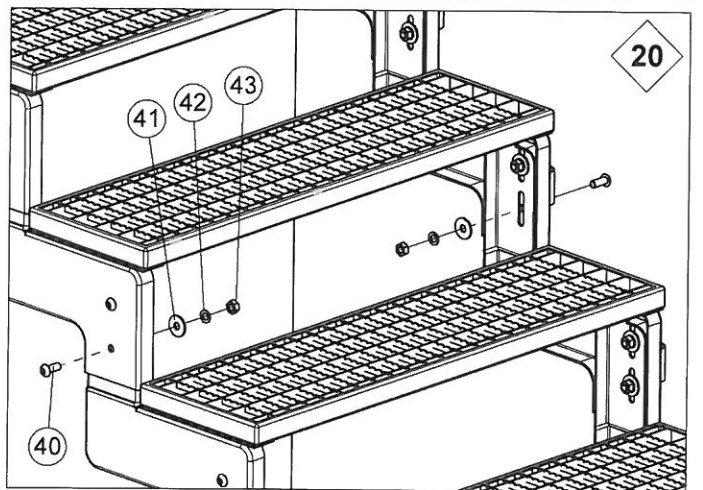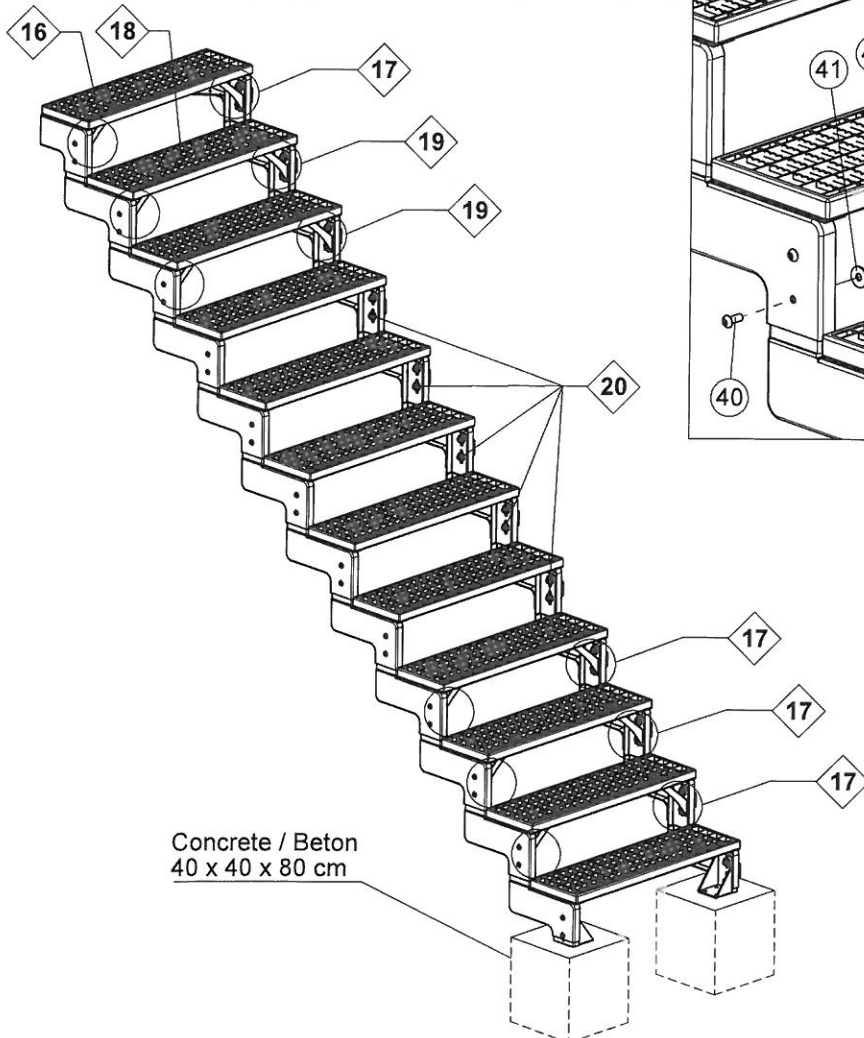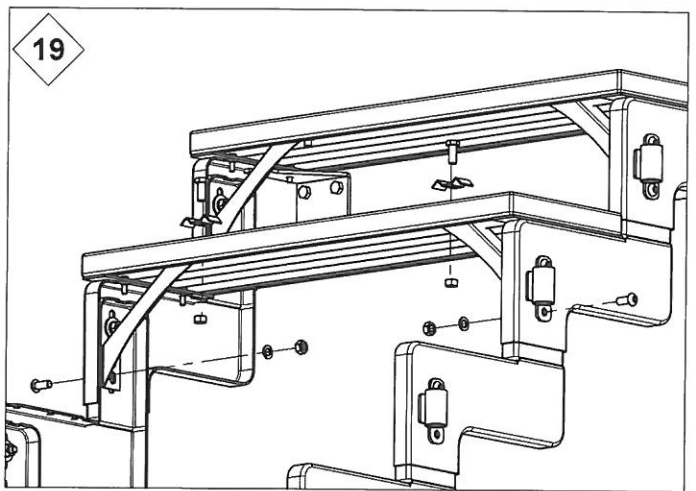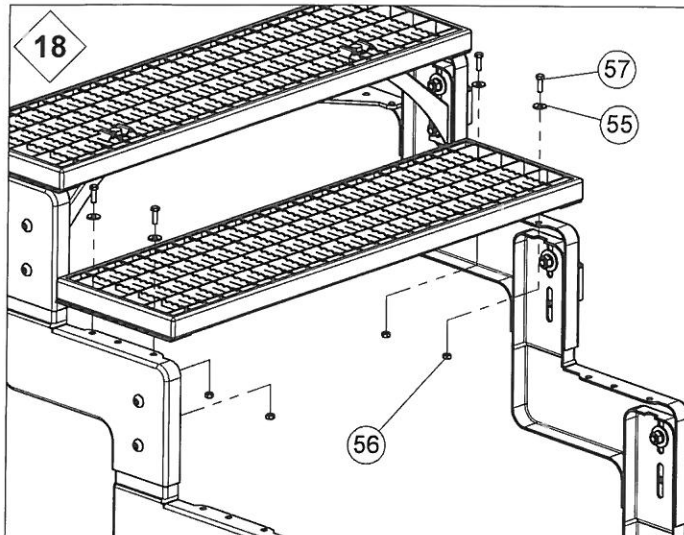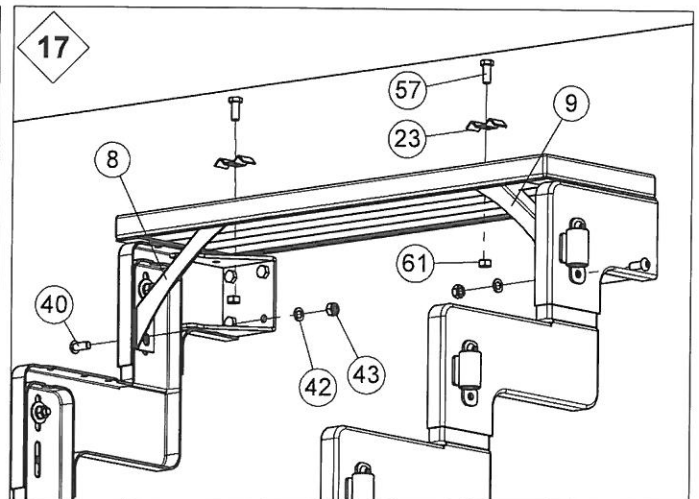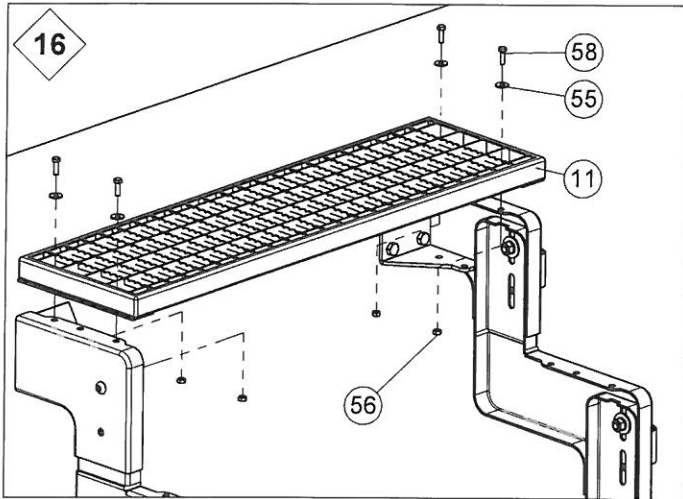

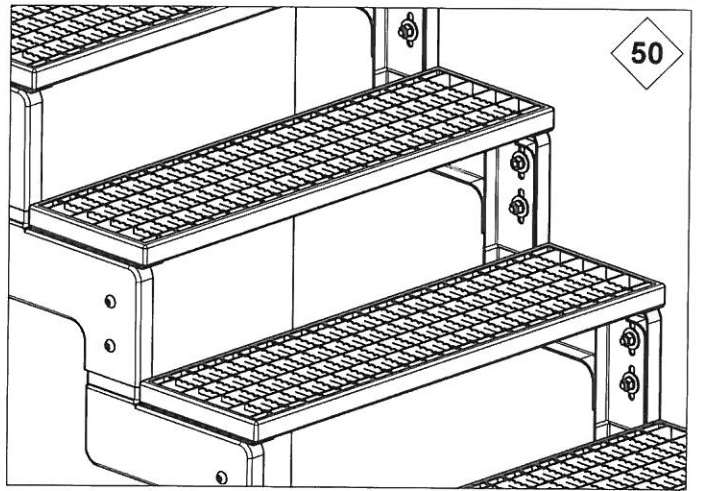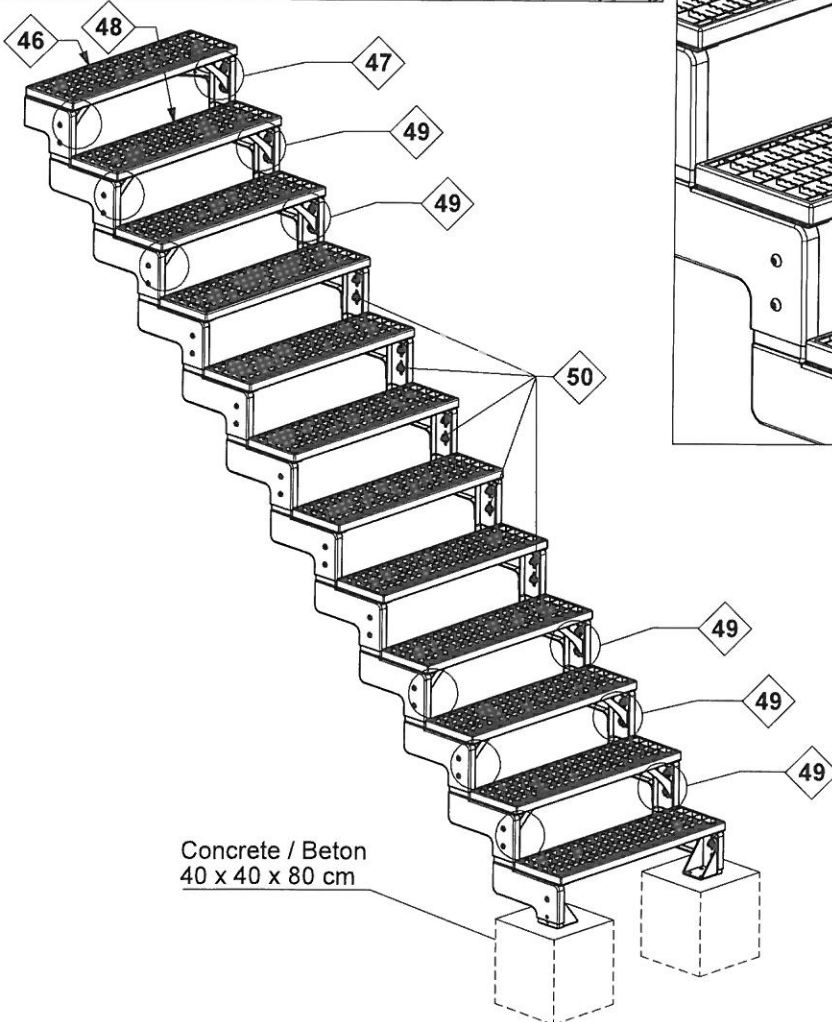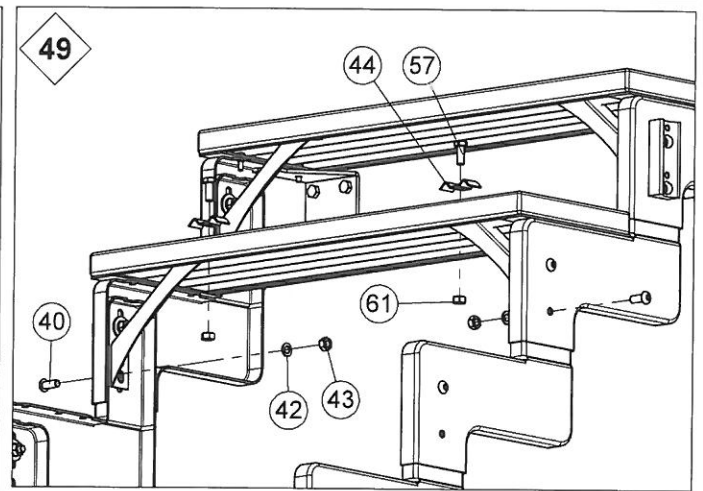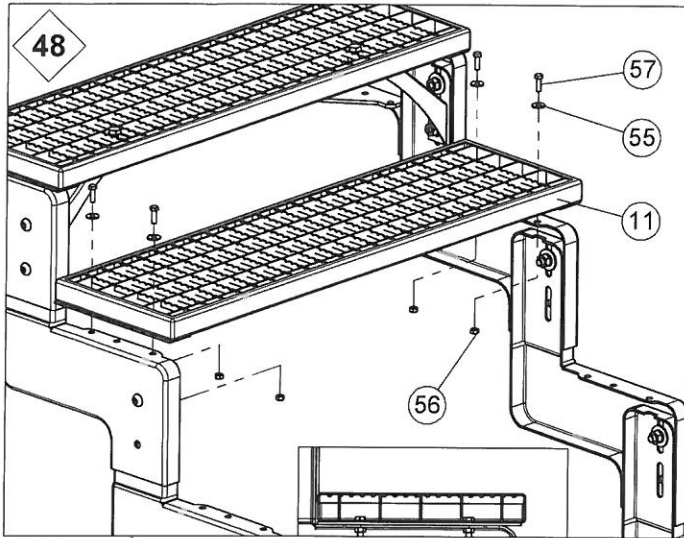
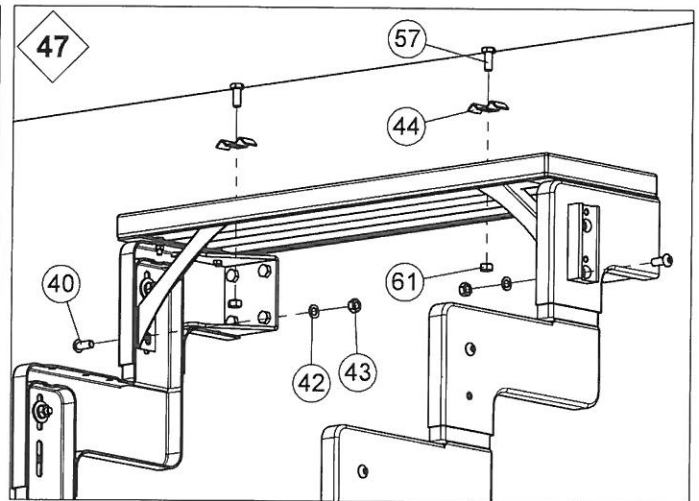
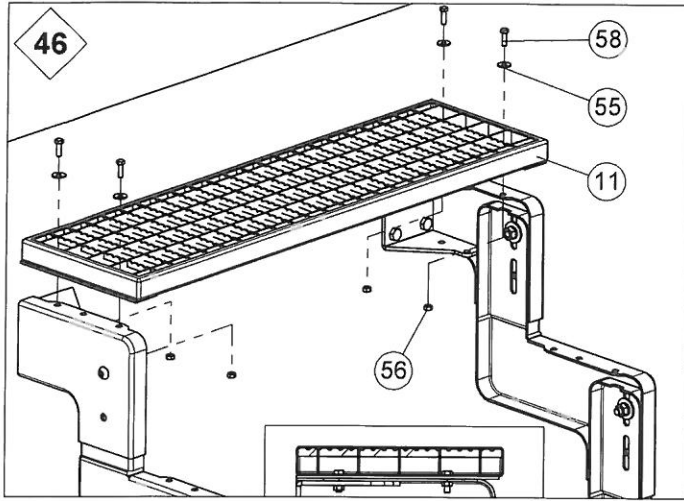


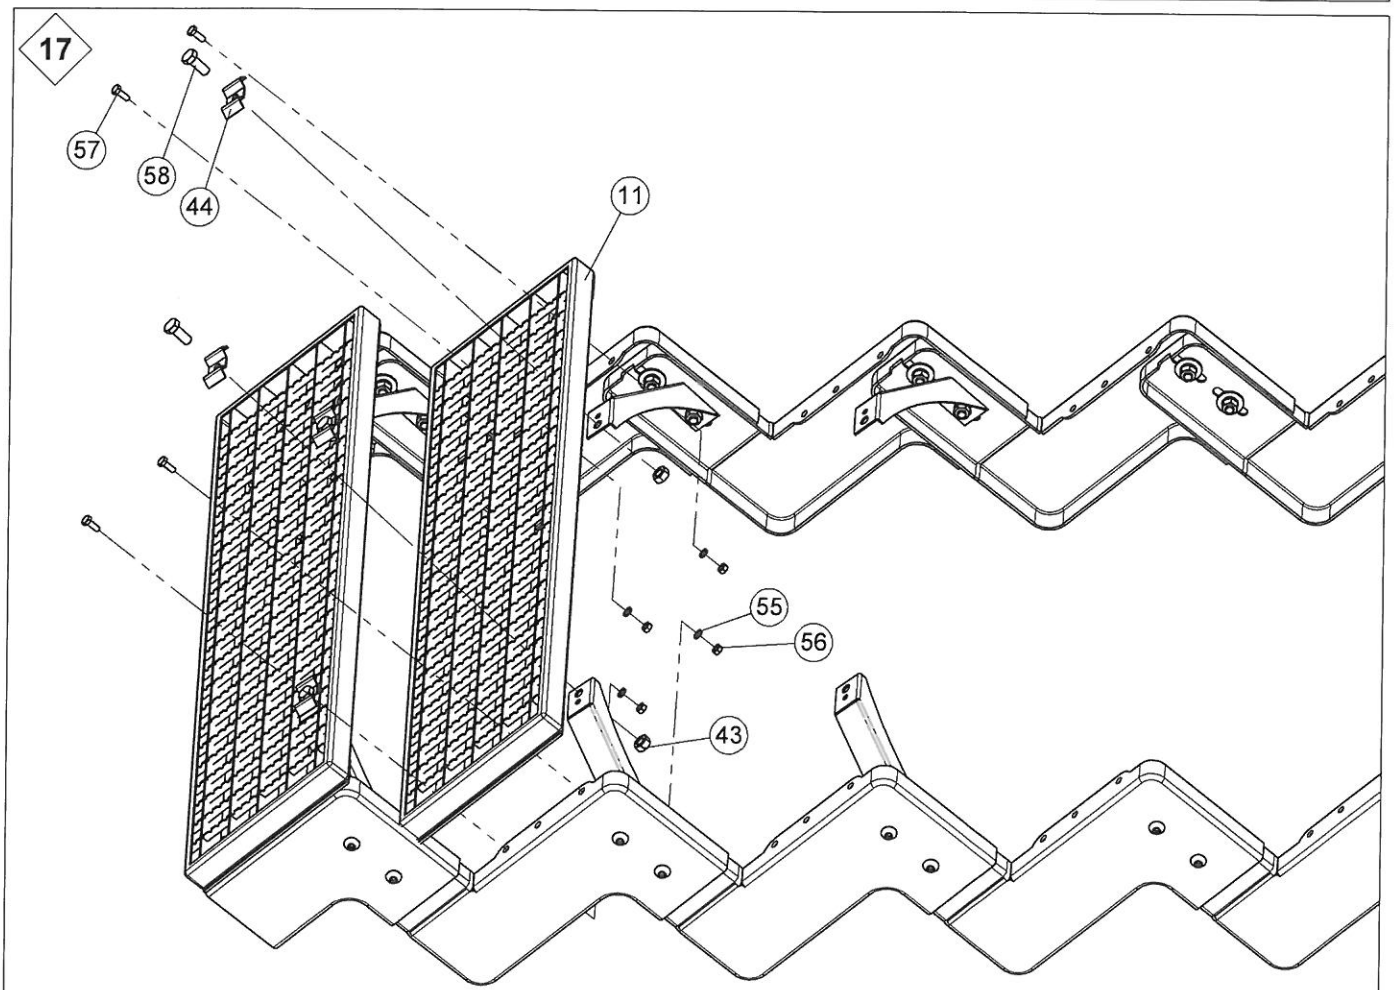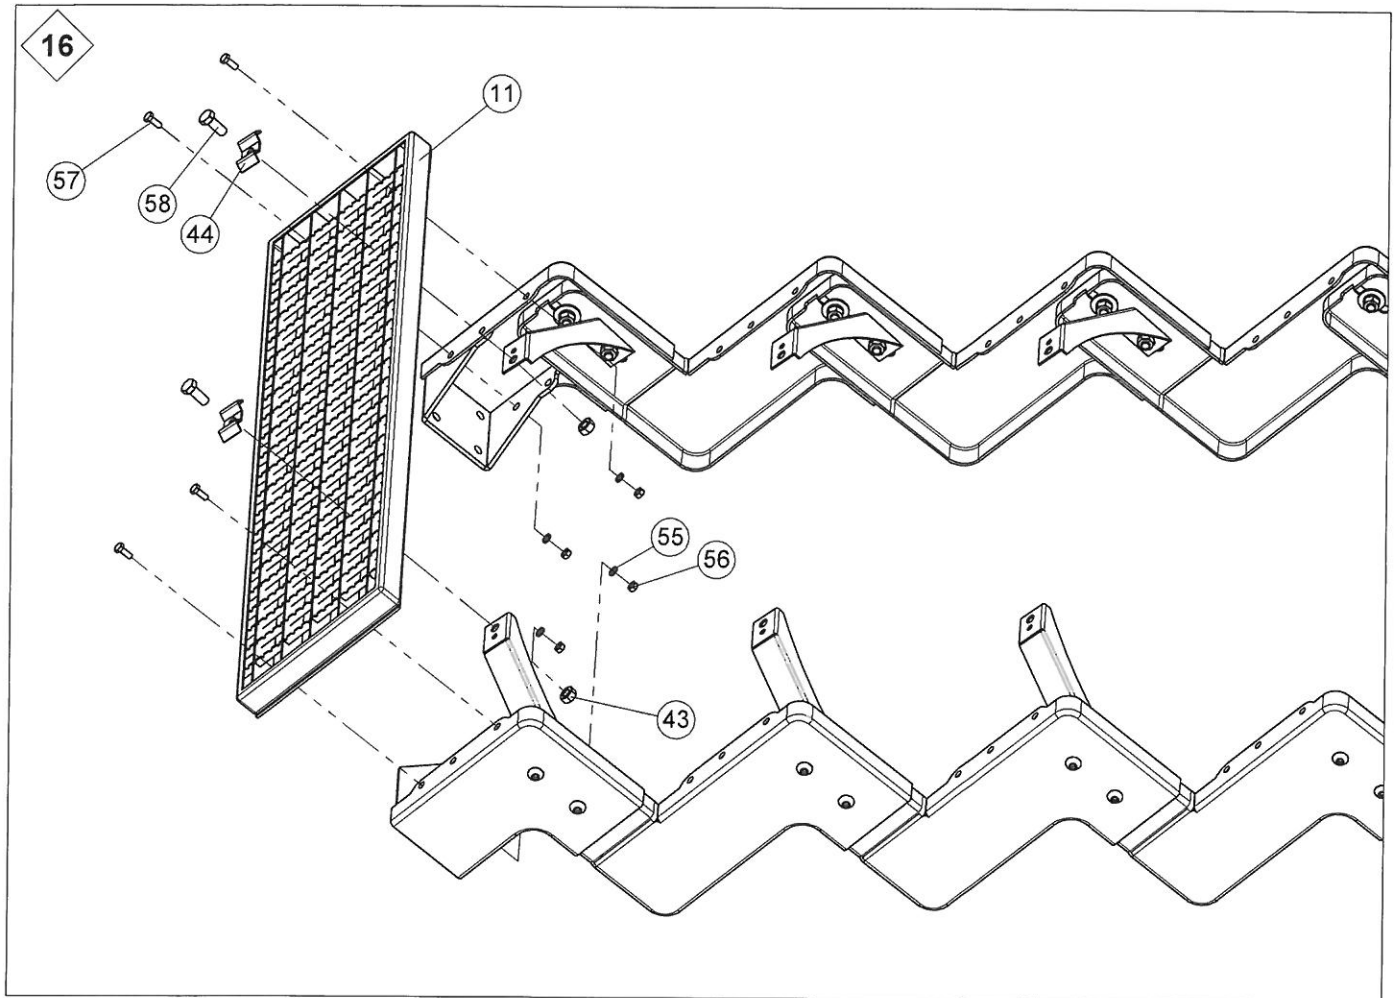


18

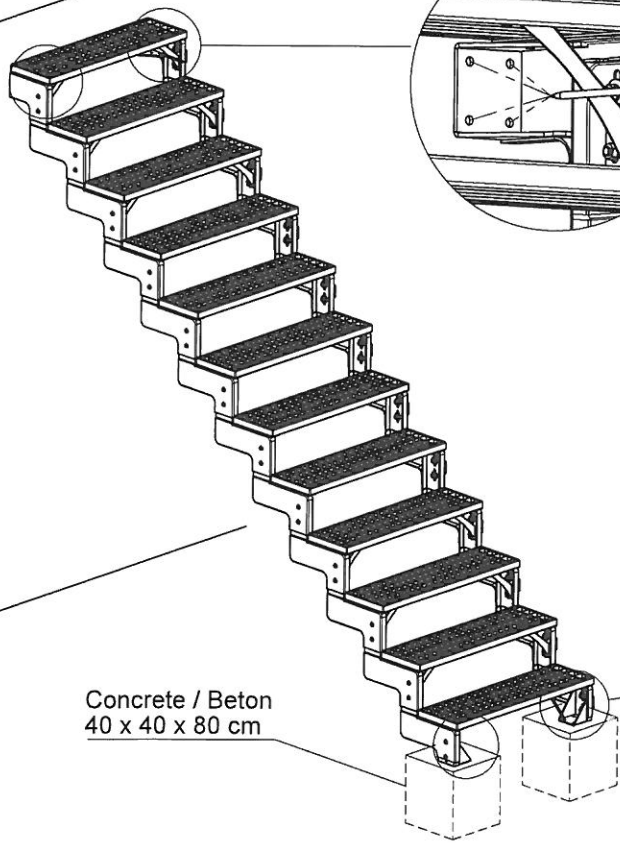

Concrete / Beton
40 x 40 x 80 cm

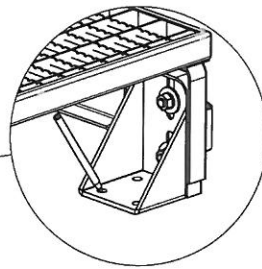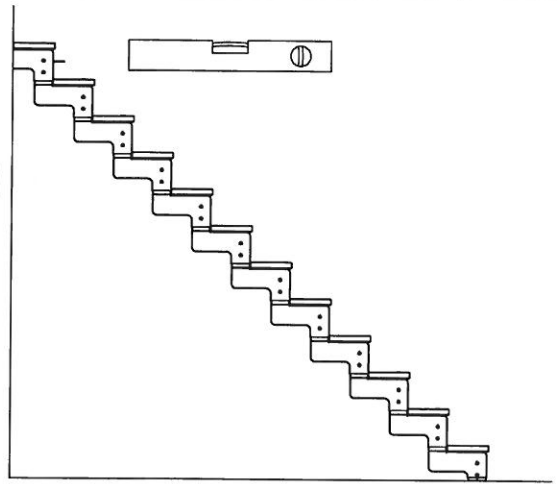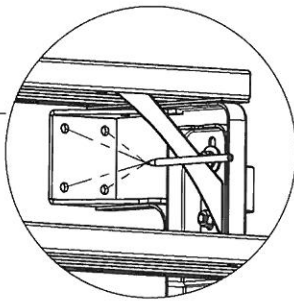


19

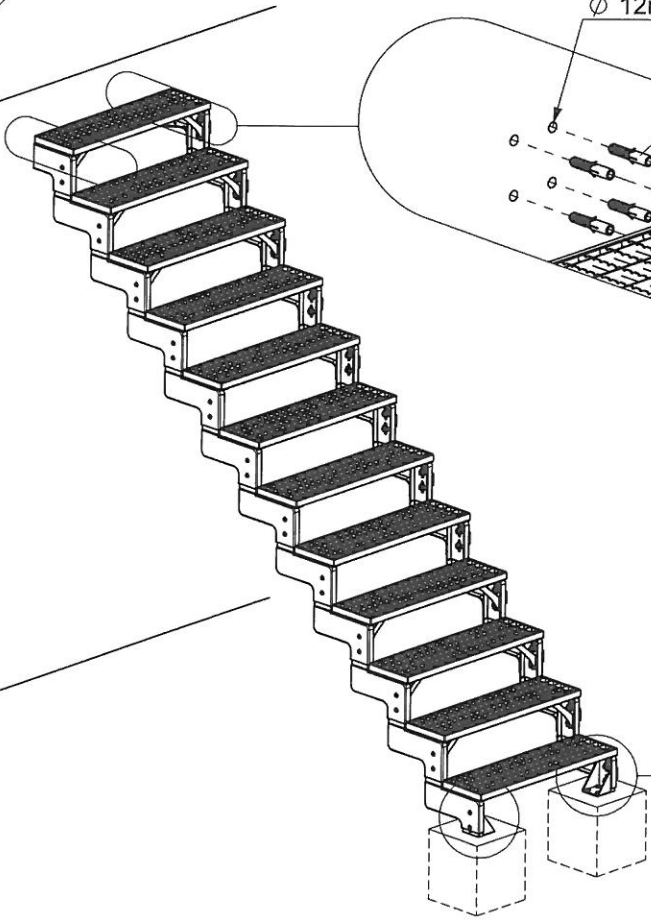

Ø 12mm ∇ 70mm

44

45

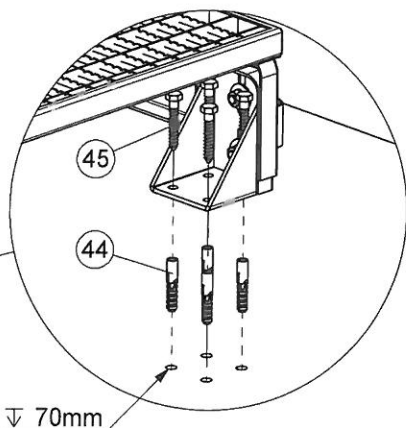

Ø 12mm ∇ 70mm